

Contents

Preface

This section tells you about special features, safety information, and preparatory information for using this manual.

Chapter 1: Set up

This section shows you how to get your TV ready.

Chapter 2: Basic Operation

This section gives you basic information about using your TV.

Chapter 3: Adjustment

This section shows you how to adjust the picture and sound to your own taste.


Chapter 4: Advanced Operation

This section shows you how to use the picture-in-picture and other useful features, as well as the programmable Remote Commander.

Appendix

This section gives you the troubleshooting, specifications, glossary and the index.

● For detailed table of contents, see page 3.

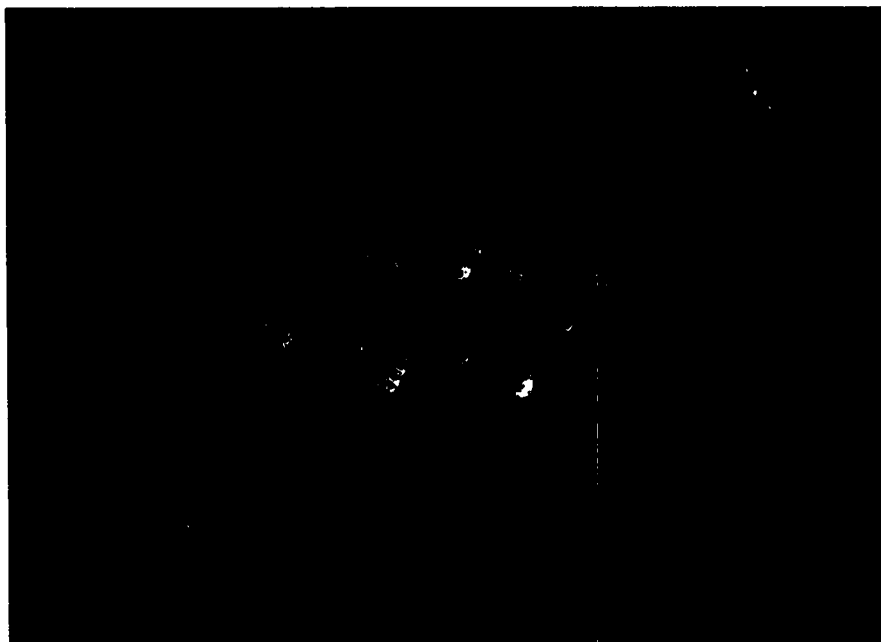

Trinitron® Color TV


Operating Instructions for 6 models

Before operating the unit, please read this manual thoroughly and retain it for future reference.

KV-27XBR51 KV-32XBR51
KV-27XBR55 KV-32XBR55
KV-32XBR75 KV-29XBR85

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

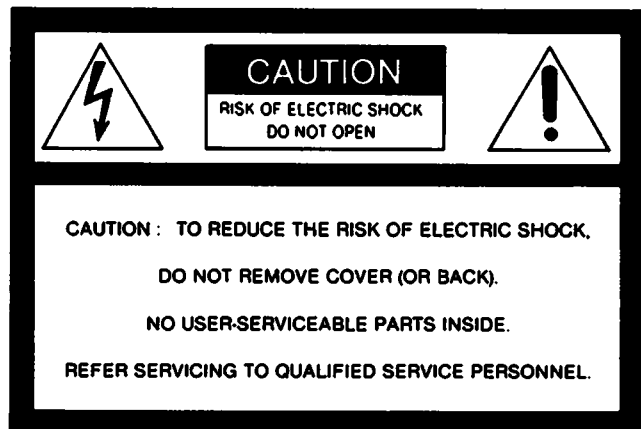

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION:

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Note to CATV system installer in the USA

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Use of this television receiver for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster/cable company and/or program owner.

If you have any questions or problems concerning your unit, please contact your nearest Sony dealer.

For detailed safety precautions, see the leaflet "IMPORTANT SAFEGUARDS."

Owner's Record

The model and serial numbers are located at the rear of the unit. Record these numbers in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____ Serial No. _____

Table of Contents

Preface

Identify your TV before use	4	About the manual	6
Introducing the Sony XBR series	5	Names of the parts	7

Chapter 1: Set up

1. Unpack the TV	11	3. Prepare the Remote Commander	14
2. Install the speakers (Necessary for KV-27XBR51, KV-32XBR51, KV-27XBR55, KV-32XBR55.)	12	4. Connect the TV to your antenna/cable	15
		5. If you want to connect other equipment	17
		6. Preset TV channels	20

Chapter 2: Basic Operation

Watching TV programs	25
Convenient operations	26
Sound	26
Picture	26
Timer	27
Channel	27

Chapter 3: Adjustment

Adjusting the picture and sound	28
Adjusting the picture	28
Adjusting the sound	32
Adjusting the swivel (Necessary only for KV-29XBR85)	35
Activating the degauss	35

Chapter 4: Advanced Operation

Watching two or more channels at the same time	36	Setting the timer-activated functions	54
Watching a window picture	37	Setting the ON/OFF timer	54
Advanced operation of a window picture	40	Setting the channel block	56
Scanning other channels	42	Setting your favorite channel	57
Watching several window pictures simultaneously	43	Using the programmable Remote Commander	59
Setting up on the screen	45	Operating Sony video equipment	59
Setting the clock	45	Operating non-Sony or Sony video equipment (pre-programmed function)	60
Labeling each video input mode	48	Operating non-Sony or Sony audio and video equipment (learning function)	62
Direct play function	50		
Captioning the TV stations	52		

Appendix




If you have any trouble	64
Specifications	65
Glossary	67
Index	68

Identify Your TV Before Use

In this manual, the instructions are given using the model with the maximum functions. Please disregard information in the manual which does not apply to your TV.

Before you proceed, please check the model number of your TV set.

This manual applies to several models and there are slight differences among them. Please check the table below to see what is equipped with your TV before you begin the operation.

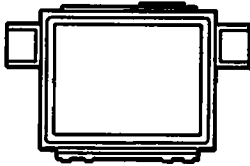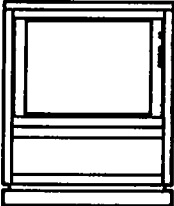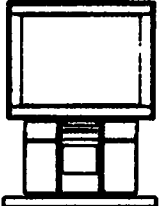Table of models		YES: equipped NO: not equipped		
Model	27/32XBR51	27/32XBR55	32XBR75	29XBR85
Shape				
Picture-in-picture function	NO	YES	YES	YES
Super woofer	YES	YES	NO	YES*
The number of S video input jacks	3	3	1	1
EXTERNAL SPEAKER or SPEAKER OUT terminals	YES	YES	NO	NO
Supplied Remote Commander	RM-Y106	RM-Y107	RM-Y107	RM-Y108

*KV-29XBR85 contains the super woofer speakers in the stand.

Introducing the Sony XBR Series

With this TV, you can:

- Receive up to 125 cable channels for a total of 181 possible off-air and cable channels with the multi-band VHF/UHF/CATV tuner.
- Receive stereo programs and Second Audio Program (SAP) broadcasts with the built-in Multichannel TV Sound (MTS) decoder.
- Get superior VCR playback pictures through the S VIDEO IN jack (when you connect a VCR with an S video output jack).
- Watch the picture and sound of your VCR through the monitor output jacks.
- Get hi-fi sound through the variable audio output jacks (when you connect an audio system).

All of these features are usually provided on recent Sony TVs.

- Watch two or more channels at the same time ("picture-in-picture").
 - Watch another channel or a VCR in a window picture.
 - Store a TV picture and call it up. (digital memo)
 - Scan other channels simultaneously and choose one of them.

(Provided only for KV-27XBR55, 32XBR55, 32XBR75, 29XBR85)

- Get three-dimensional sound reproduction with the 3D sound system (when you connect two main speakers and one super woofer speaker).
- Get fine picture constantly with the Active Signal Correction (ASC) system. The ASC system adjusts the signals and corrects distorted signals for the entire picture on the screen.
- Get natural sound with the Sound Retrieval System (SRS®)*.
This system is effective for both stereo and monaural sound.
- Set up the TV and adjust the picture and the sound in the on-screen menu. In the on-screen menu, you can set everything with mainly three buttons, + / - and RETURN.

All of these are unique features of the XBR series.

And here are the Sony's advanced technology that have been applied to the XBR series to obtain high quality picture:

- The New Dynamic picture™ system adjusts picture contrast automatically to produce more detail in both bright and dark areas of every scene.
- The Colorpure Filter™ produces fine picture detail without color spill or color noise.
- The Velocity Modulation (VM) circuitry produces clean and sharp black and white contrasts.
(Provided only for KV-29XBR85, 32XBR51, 32XBR55, 32XBR75)
- The Dynamic Focus™ circuitry automatically focuses the scanning electron beam for enhanced sharpness over the entire picture, especially in the corners.
(Provided only for KV-29XBR85, 32XBR51, 32XBR55, 32XBR75)
- The Trinitone™ control allows you to adjust the color temperature (tint) of the picture so that you can obtain the best color.

**Sound Retrieval System (SRS®) reproduces the ambience and dynamics of a live performance, creating the sense of being present at the concert hall or recording studio. SRS lets you enjoy optimum sound from anywhere in the room.*

(●) SOUND RETRIEVAL SYSTEM

The (●) Sound Retrieval System is manufactured by Sony Corporation under license from the Hughes Aircraft Company, a subsidiary of GM Hughes Electronics. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

(●), Sound Retrieval System and SRS® are trademarks of the Hughes Aircraft Company, a subsidiary of GM Hughes Electronics.



About the Manual

This manual is designed for you, the average user. You can use this manual to find exactly the information you need, whether or not you are familiar with TV sets.

To get the most out of your TV, it is important to read this manual carefully. It will answer any questions you may have about using the TV. It shows you how the TV works and provides step-by-step instructions on how to use it.

Use the information below to help you follow the instructions in this manual.

- Names of the buttons and positions on the TV are shown in capital letters:

Ex. Press ENTER.

Set the CABLE VIDEO to VIDEO.

- The steps you need to follow are shown like this:

Ex. Press ADD.

- Introductions are in italics, like this:

Ex. *A You can receive cable TV by connectig a cable supplied by your local cable company.*

There is a glossary provided at the end which lists the definitions of certain technical terms that appear in the text.




There is also an index provided at the end so that you can find out what page the information you need is on.

Names of the Parts

To be continued ►


See the pages indicated in ○ for the instructions.

Front

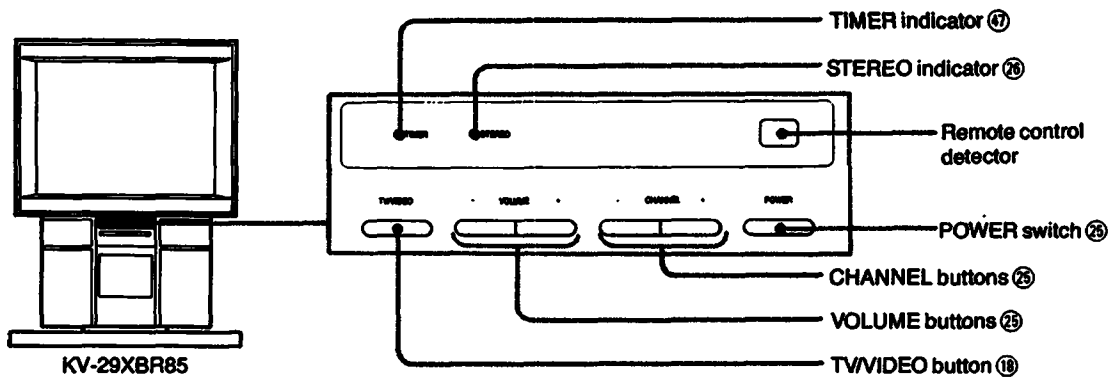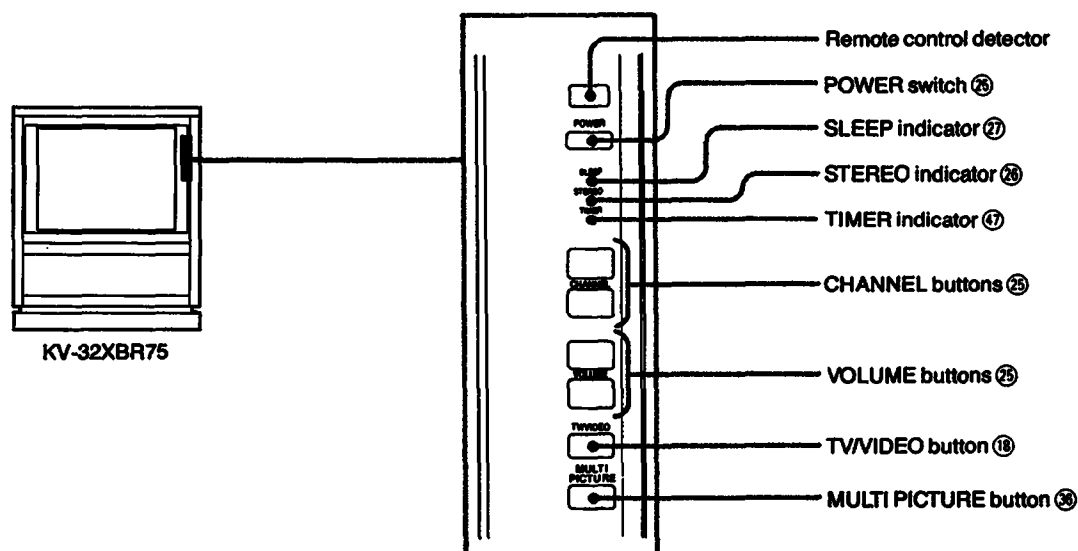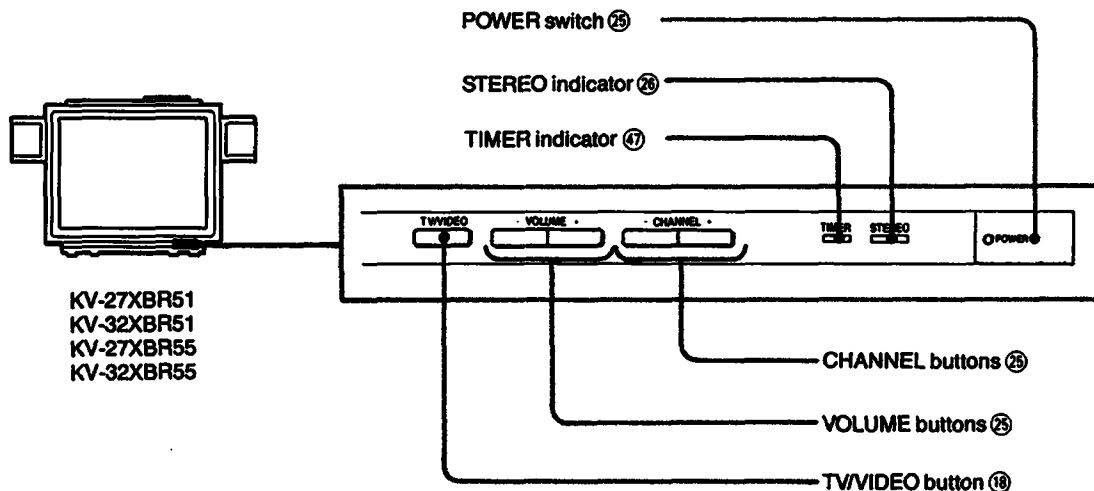

About the Manual / Names of the Parts

Rear

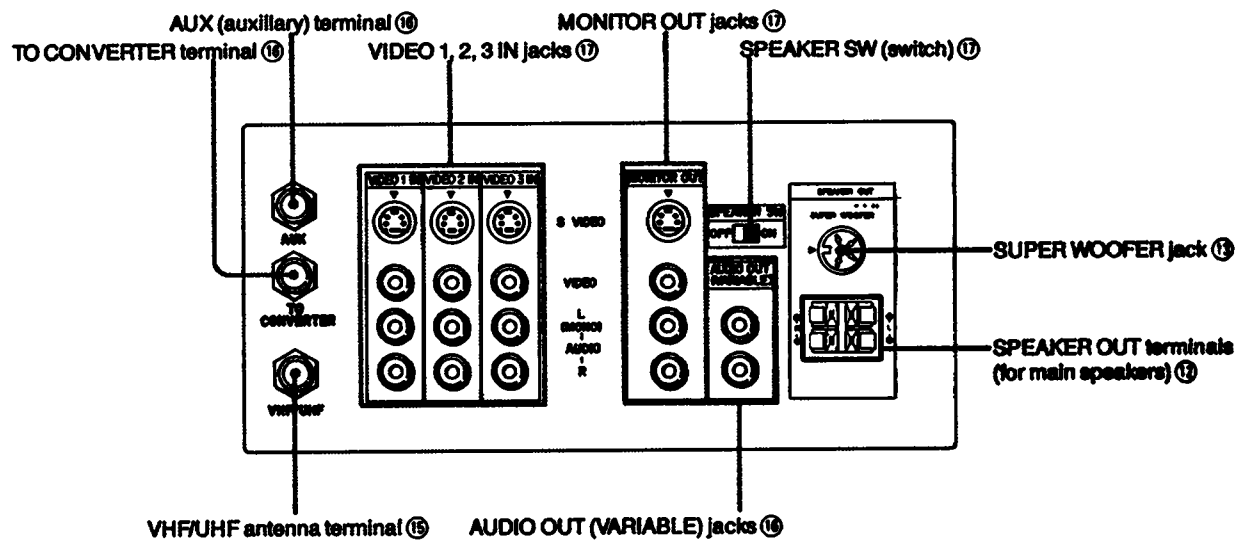


The whitened parts are only for KV-27XBR51, 32XBR51, 27XBR55, 32XBR55.


Programmable Remote Commander

See the pages indicated in ○ for instructions.

Names of the Parts

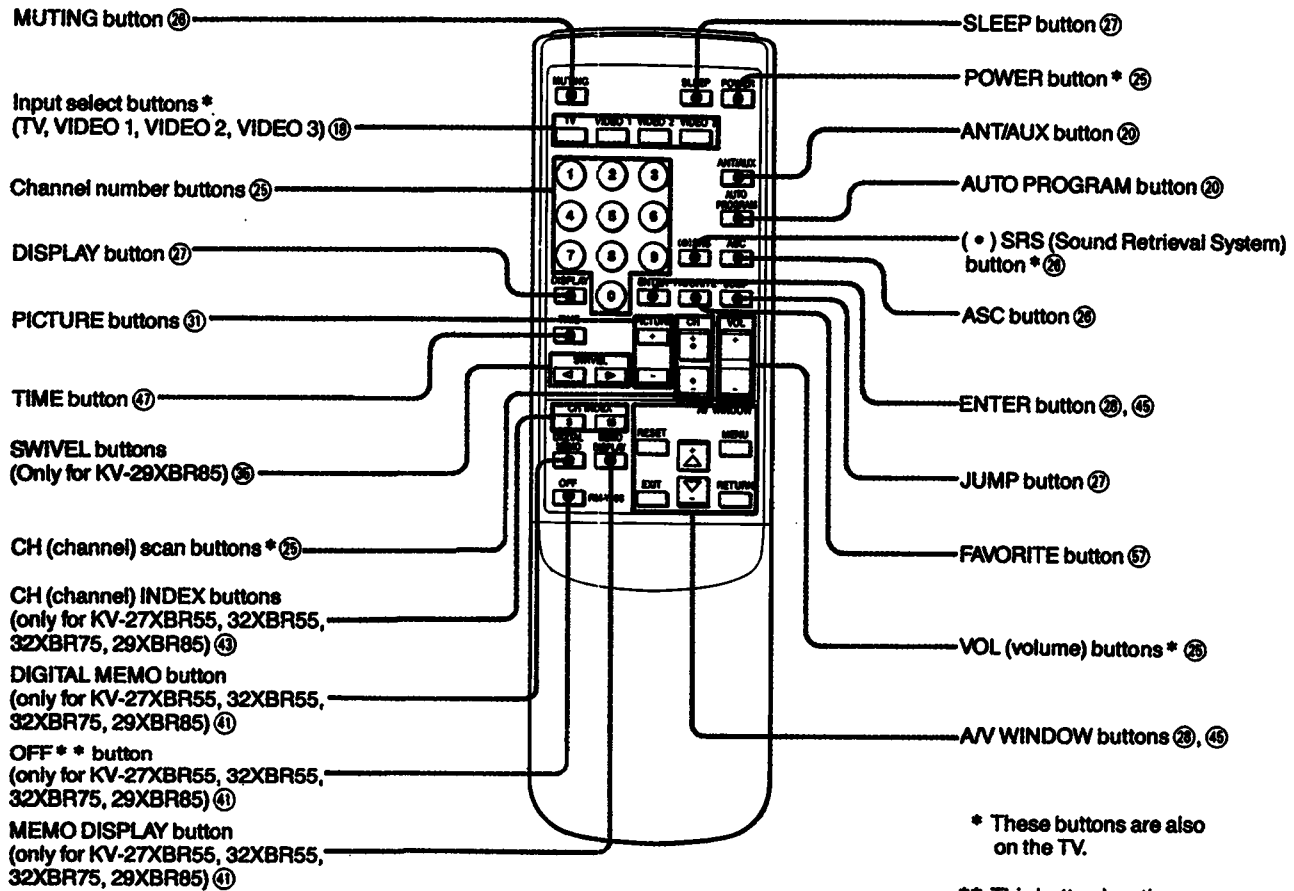


Buttons inside the cover

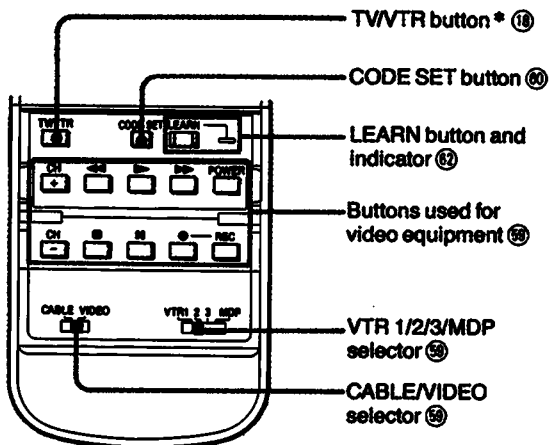


To use the buttons inside the cover

Slide down the cover.

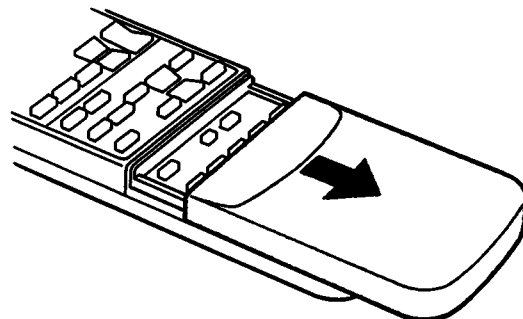


Names of the Parts

For models equipped with the panel (KV-27XBR55, 32XBR55, 32XBR75, 29XBR85), place the panel up or down.

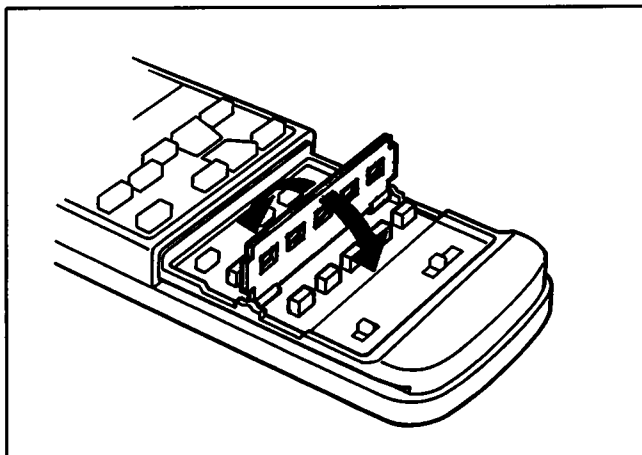


When the panel is up, buttons for video equipment appear.
When the panel is down, buttons for picture-in-picture appear.

Buttons for picture-in-picture

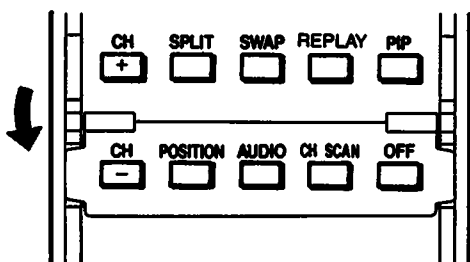

Mini Remote RM-KIT

The mini commander is supplied only to KV-27XBR51, KV-32XBR51, KV-27XBR55, KV-32XBR55.

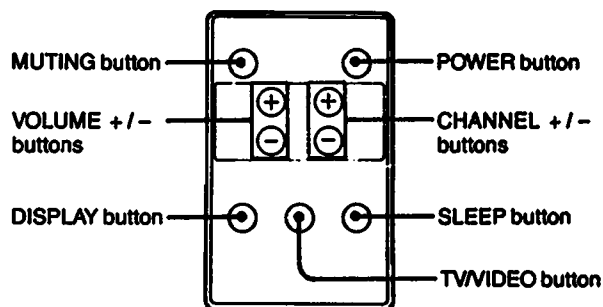

1. Unpack the TV

- 1 Carefully take the TV set out of the packing carton according to the instructions on the outside of the carton. Save the carton and packing materials for later transport.

Note

The supplied accessories are packed in the upper part of the carton. Be sure not to dispose of them.

- 2 Place the TV in a dry, cool place so that the ventilation openings at the side of the unit are not blocked.
- 3 Plug the TV into an AC 120 volt power outlet.

Note on inserting the plug

One blade of the plug is wider than the other for the purpose of safety and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.


Safety Notes

Should any liquid or solid object fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.

For owners of the KV-29XBR85

The cover for rear panel is packed inside the TV stand.

- 1 When you unpack the TV, open the TV stand doors and take the cover out from inside the stand.
- 2 When you have finished making all the connections (see page 15 to 19 for connecting information), attach the cover as illustrated below:

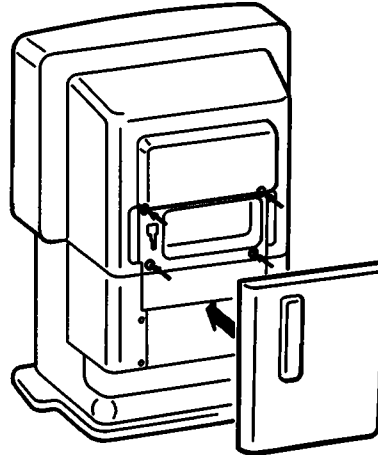


Note

When you unpack the TV, take off the shock absorbers. Otherwise, you will not be able to use the swivel function.


2. Install the Speakers (Necessary for KV-27XBR51, 32XBR51, 27XBR55 and 32XBR55)

Step 1: Install the Main Speakers

1 Attach the supplied screws.

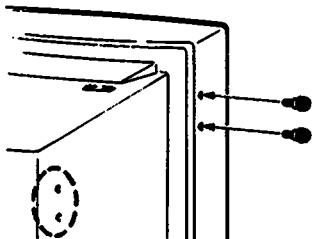

2 Install the main speakers left and right.

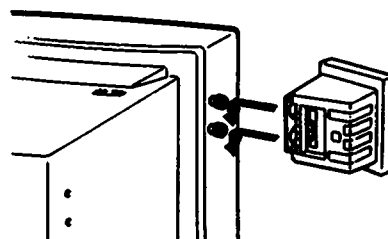


* Or you can attach the main speakers deep at the rear portion of the TV.


You can place the main speakers anywhere within the reach of the speaker cords instead of attaching them to the TV. When installing them on the TV, be sure not to place them on the woofer. The speakers are provided with camera screws for installation on a speaker stand, tripod, etc.

Step 2: Connect the Main Speakers


Make sure to turn off the TV before connecting the speaker cords.

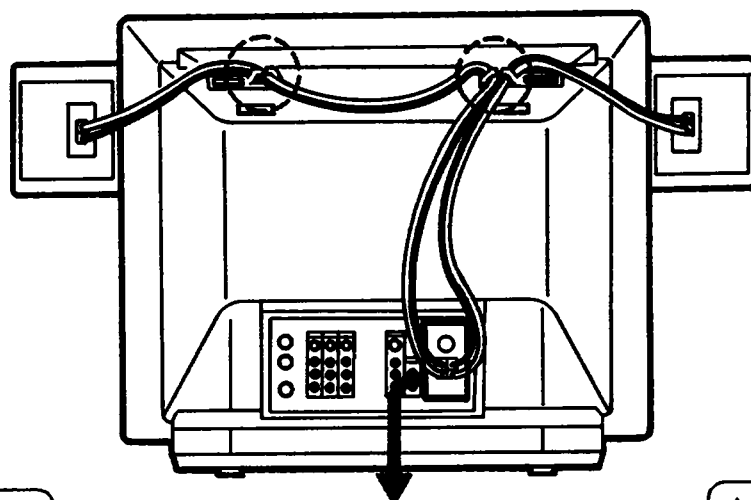


Right main speaker

 

Left main speaker

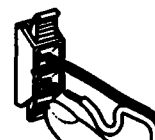

Rear of the TV

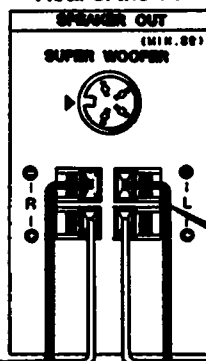


Connect the black as illustrated.

Connect the red cord as illustrated.

Right speaker

Left speaker

Step 3: Connect the Super Woofer

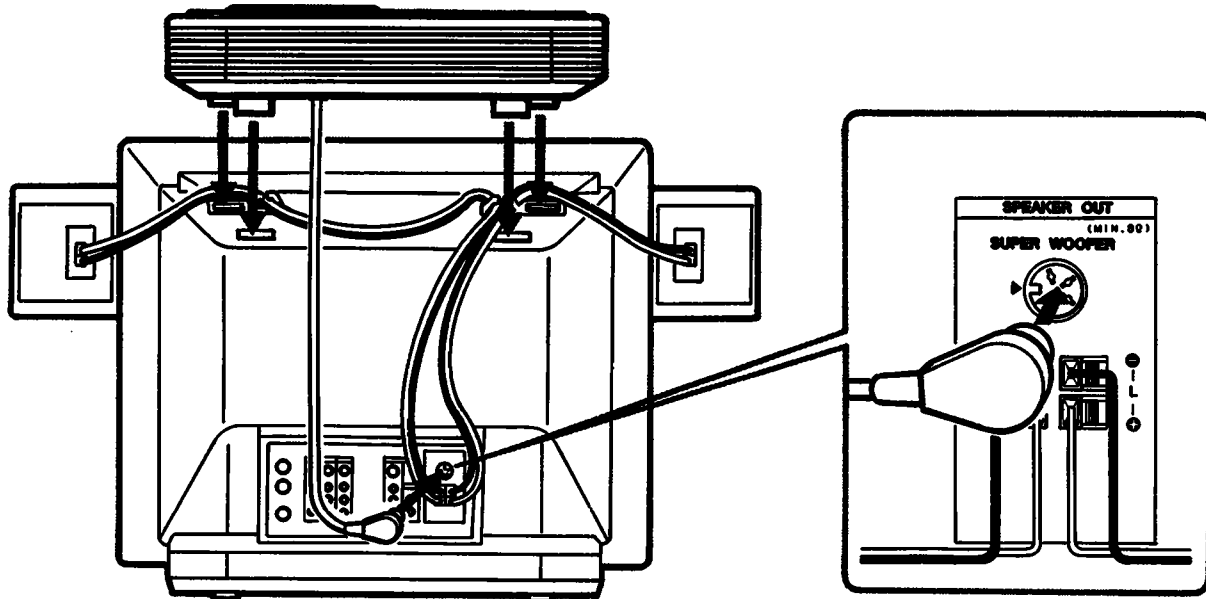

- 1 Insert the projecting parts at the bottom of the super woofer into the receptacles on the top of the TV.
- 2 Connect the super woofer cord to the SUPER WOOFER jack on the rear of the TV.


Notes on the speakers

- Do not carry the TV holding the main speakers.
- The low bass sound is output from the super woofer. Be careful not to block the openings of the super woofer when installing the TV. Otherwise, the low bass sound will not be fully reproduced.
- Be sure to use the supplied speakers, since the TV and the speakers produce sounds as one unit.


3. Prepare the Remote Commander

Install the batteries in the Programmable Remote Commander


1 Push to open the lid.

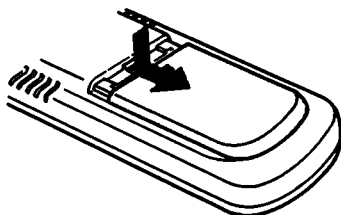

2 Install two size AA (R6) batteries with the correct polarity.

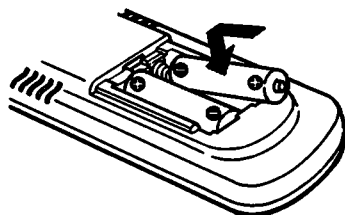


3 Replace the lid.

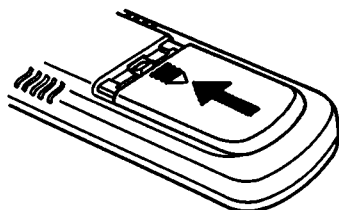


- Under normal operation, batteries will last up to half a year. If the Remote Commander does not operate properly, the batteries might be exhausted. Replace both of them with new ones.
- To avoid damage from possible battery leakage, remove the batteries if you will not use the Remote Commander for a long time.

Install the batteries in the Mini Remote


(The Mini Remote is supplied to KV-27XBR51, 32XBR51, 27XBR55 and 32XBR55, only.)

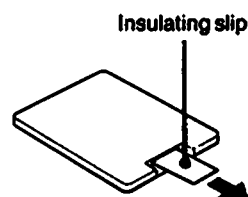

1 Insert a thin instrument into the hole, and while pressing it in the direction of the arrow (①), pull out the battery case (②).

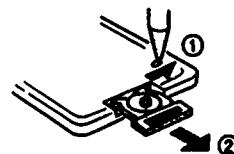

2 Insert a Sony CR2025 battery with the flat surface (positive side) upward.

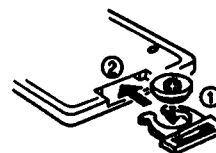

Caution



On the lithium battery

- Keep the lithium battery out of the reach of children.
- Should the battery be swallowed, immediately consult a doctor.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.
- Replace the battery with a Sony CR2025 lithium battery.
- Use of another battery may present a risk of fire or explosion.

WARNING

Battery may explode if mistreated. Do not recharge, disassemble or dispose of it in fire.

4. Connect the TV to Your Antenna/Cable

To be continued ►

You can use either an indoor or outdoor antenna with your TV. We recommend using an outdoor antenna for better picture quality.


You can receive cable TV by connecting a cable supplied by your local cable company.

To Connect a VHF, UHF, or VHF/UHF Combination Antenna * or CATV Cable

75-ohm coaxial cable (round)

- 1 Check your antenna cable type and prepare the end of the cable using the F-type connector.

Attach an F-type connector (not supplied).

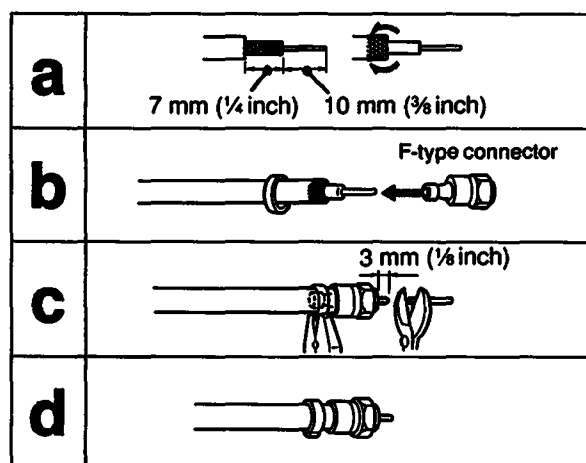

- 2 Plug the connector into the VHF/UHF terminal at the rear of the TV.




* Most combination antennas are equipped with a signal splitter. Remove the splitter and attach the appropriate connector.


300-ohm twin-lead cable (flat)

- 1 Check your antenna cable type and prepare the end of the cable using the antenna connector.


Attach an antenna connector (not supplied).

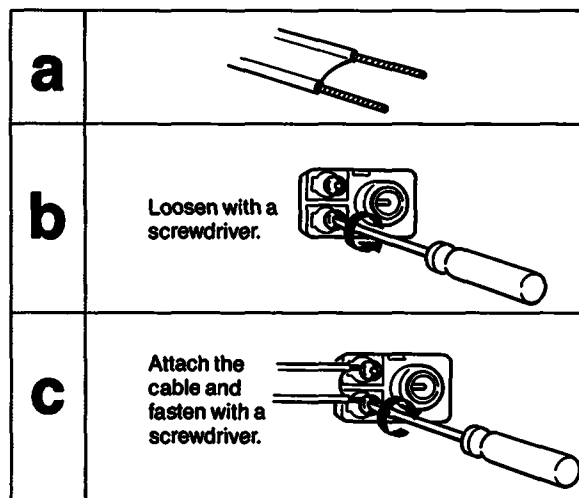

- 2 Plug the connector into the VHF/UHF terminal at the rear of the TV.

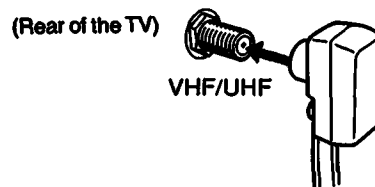


For better picture quality, connect optional antenna cable so that the 300-ohm twin-lead cable can be separated a distance from the TV.

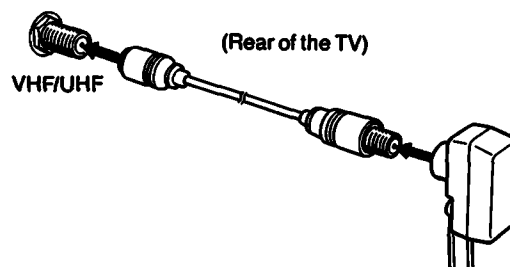

3. Prepare the Remote Commander / 4. Connect the TV to Your Antenna/Cable

4. Connect the TV to Your Antenna/Cable

If you want to connect both VHF and UHF antennas

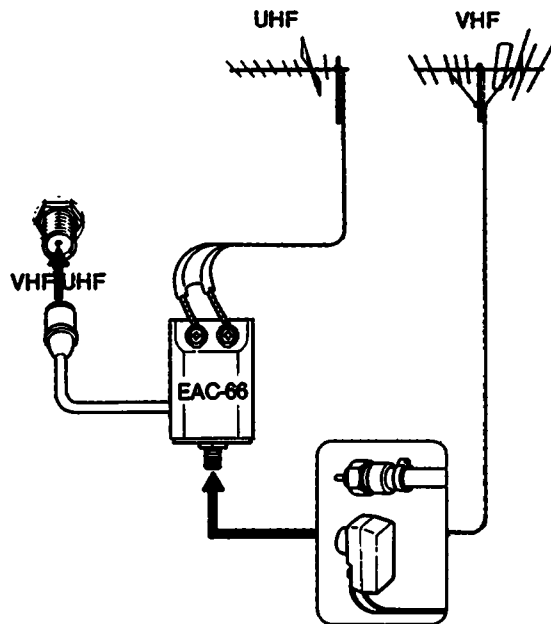


Use the EAC-66 U/V mixer (not supplied).

- 1 Prepare the VHF antenna cable end using the appropriate connector.
- 2 Connect the cables to the mixer.
- 3 Connect the mixer to VHF/UHF.

When you use the U/V mixer.

Snow and noise may appear in the pictures of the cable TV channels over 37 ($W + 1$).


If you want to connect both VHF/UHF antennas and a CATV cable

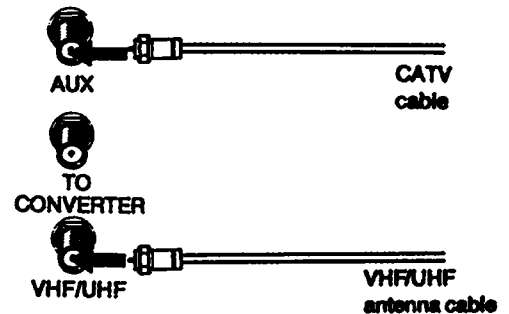

Note

In this case, do not connect anything to the TO CONVERTER terminal.

If you want to connect a cable with a special converter/decoder* for pay cable TV systems

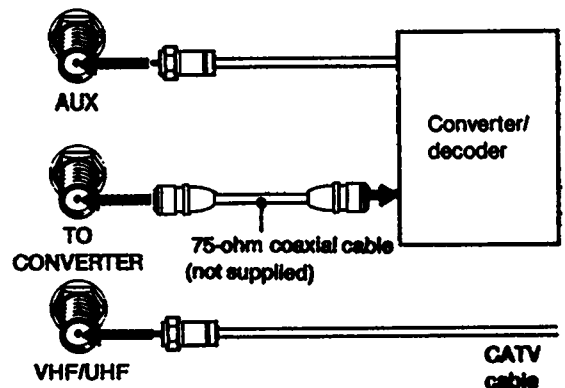

Pay cable TV systems use scrambled or encoded signals and require special converters (decoders) in addition to the normal cable connection.

* The special converter/decoder will be supplied by the cable company.

5. If You Want to Connect Other Equipment

To be continued ►


If You Want to Connect a VCR

With these connections, you will be able to...

- View the playback of video tapes
- Record TV programs
- Record a TV program while viewing another

1

VCRs with an S video output jack

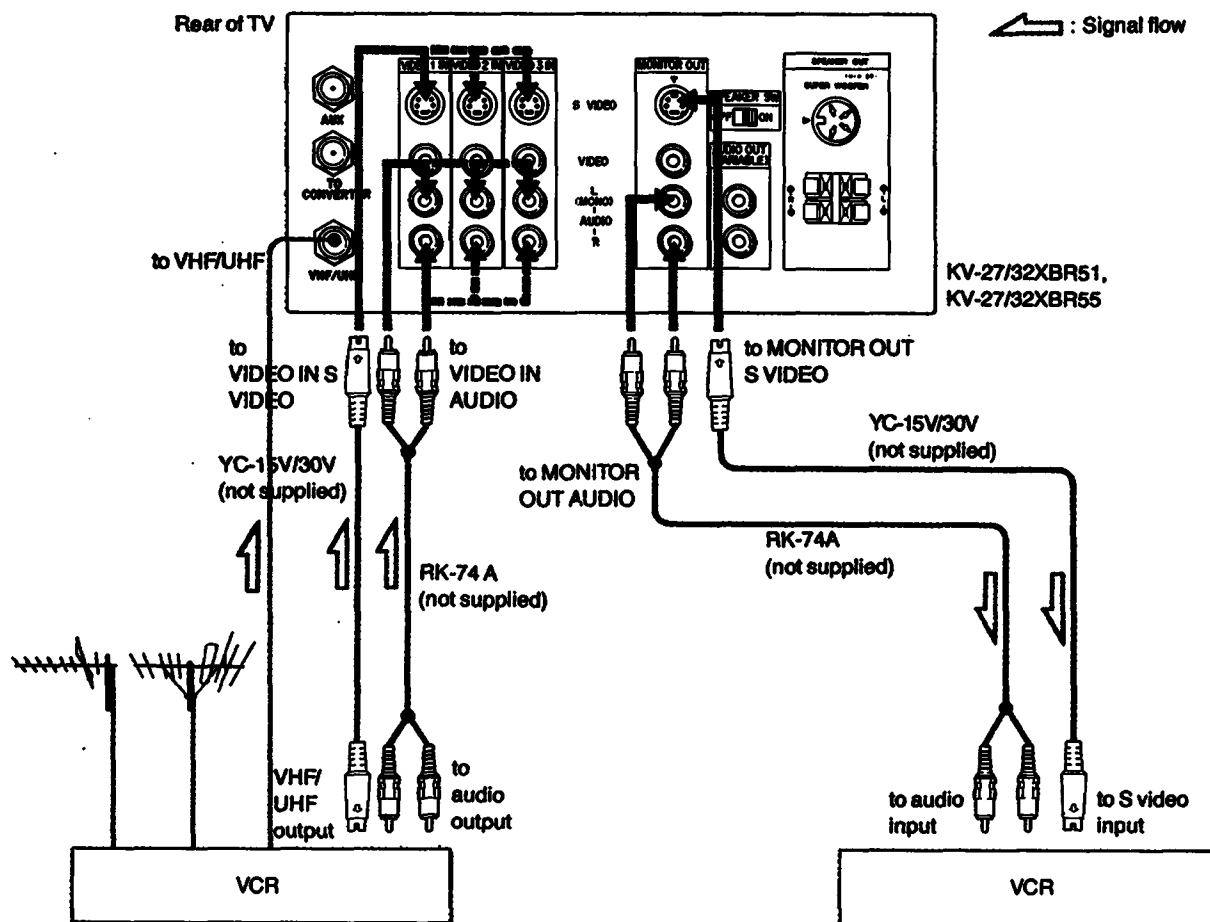

Notes: The signal input to VIDEO IN cannot be output from S VIDEO OUT.
The signal input to S VIDEO IN can only be output from S VIDEO OUT.




- If you connect a monaural VCR, connect the audio output of the VCR to the L (MONO) jack of VIDEO 1/2/3 IN of the TV. You can hear the monaural sound from both speakers.
- For operation, refer to the instruction manual furnished with the VCR.
- Keep the VCR away from the TV if the picture or sound is affected.
- Do not connect the same VCR to output and input.

4. Connect the TV to Your Antenna/Cable / 5. If You Want to Connect Other Equipment

5. If You Want to Connect Other Equipment

2

VCRs/video disc players not equipped with an S video output jack

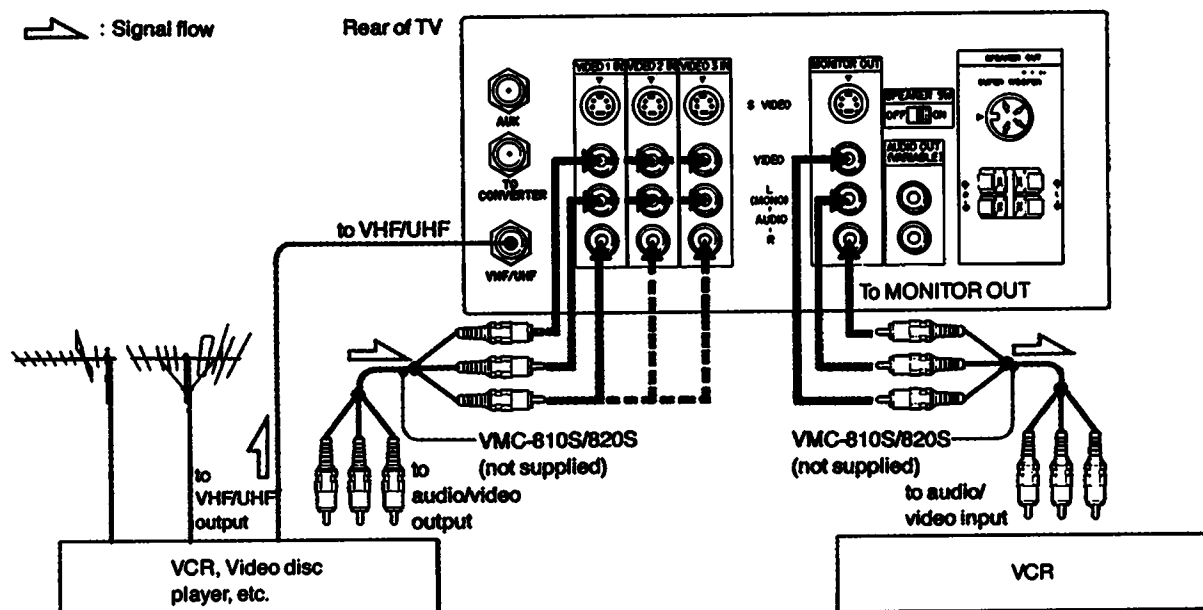

Preparations

- 1 Turn on the TV.
 - 2 Press the TV/VIDEO button on the TV or an input select button on the Remote Commander so that the "VIDEO 1", "VIDEO 2" or "VIDEO 3" indication appears on the screen.
VIDEO 1: for equipment connected to VIDEO 1 IN
VIDEO 2: for equipment connected to VIDEO 2 IN
VIDEO 3: for equipment connected to VIDEO 3 IN
- You can label each of these input modes. For details, see page 48.
 - You need not to select mode when you use the direct play function. For details, see page 50.

To view one TV program while recording another
Press the TV/VTR mode select button on the VCR or Remote Commander so that the VCR will be in the TV mode. Press the TV button on the Remote Commander, and select the channel you want to view.

Operation

For operation, refer to the instruction manual furnished with the VCR.

When you use an infrared remote control VCR, you can operate the VCR with the supplied Remote Commander regardless of it is Sony VCR or non-Sony VCR.
See "Using the Programmable Remote Commander" on page 61.


To return to the TV mode

- Press the TV/VIDEO button on the TV so that a channel number appears on the screen.
- Press the TV button on the Remote Commander.

When you cannot obtain a clear picture and/or sound
Make sure that the TV/VTR mode select button on the VCR is set to TV. Re-select the desired channel with the buttons on the TV or the Remote Commander.

If You Have an Audio System

— To listen to the TV or connected VCR sound through an audio system

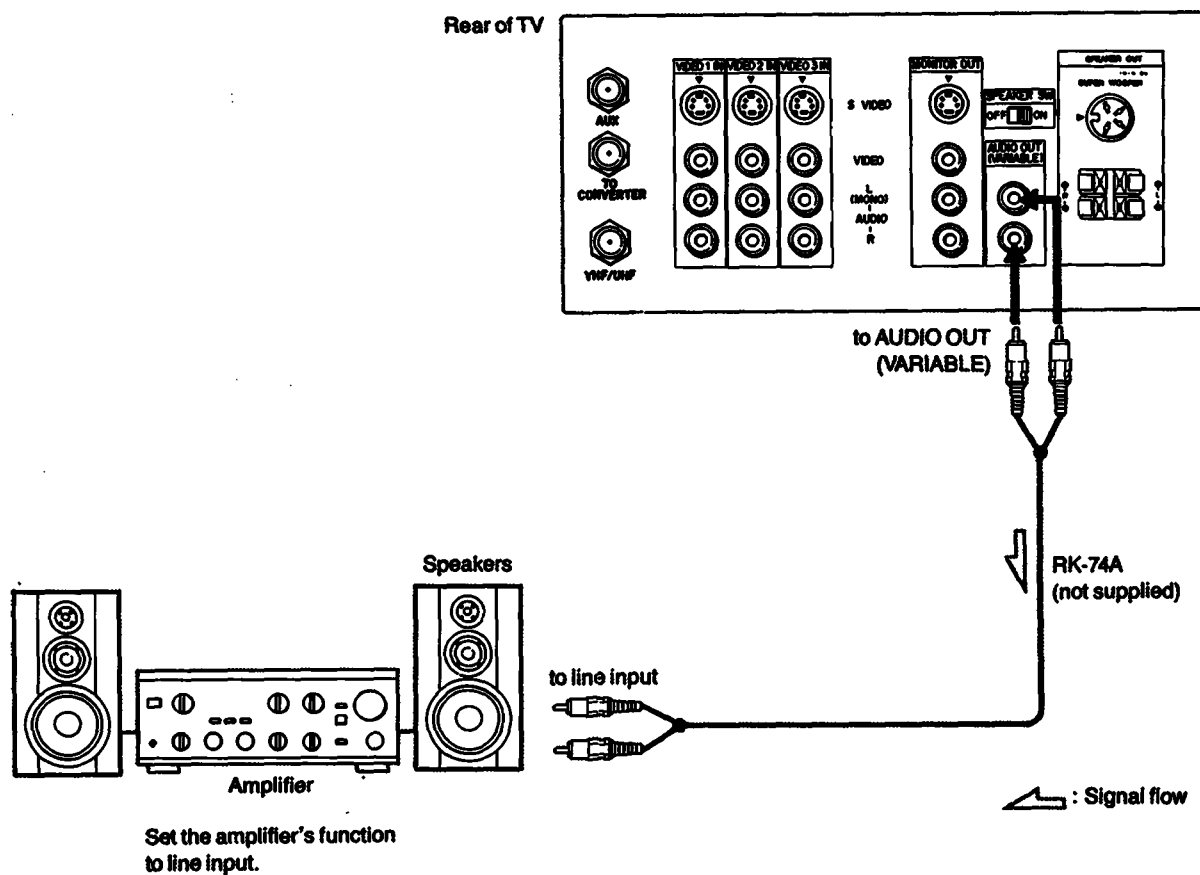

5. If You Want to Connect Other Equipment

To adjust the sound level

Leave the amplifier volume, bass and treble controls at their mid position and adjust the level with the VOLUME buttons on the TV or the VOL buttons on the Remote Commander.


When you do not want to hear the TV sound, be sure to set the SPEAKER SW (switch) on the TV to OFF. The sound from the TV's speakers will be cut off.

1997, 1998, 1999, 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2018, 2019, 2020, 2021, 2022, 2023, 2024, 2025, 2026, 2027, 2028, 2029, 2030, 2031, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2043, 2044, 2045, 2046, 2047, 2048, 2049, 2050, 2051, 2052, 2053, 2054, 2055, 2056, 2057, 2058, 2059, 2060, 2061, 2062, 2063, 2064, 2065, 2066, 2067, 2068, 2069, 2070, 2071, 2072, 2073, 2074, 2075, 2076, 2077, 2078, 2079, 2080, 2081, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2092, 2093, 2094, 2095, 2096, 2097, 2098, 2099, 2100, 2101, 2102, 2103, 2104, 2105, 2106, 2107, 2108, 2109, 2110, 2111, 2112, 2113, 2114, 2115, 2116, 2117, 2118, 2119, 2120, 2121, 2122, 2123, 2124, 2125, 2126, 2127, 2128, 2129, 2130, 2131, 2132, 2133, 2134, 2135, 2136, 2137, 2138, 2139, 2140, 2141, 2142, 2143, 2144, 2145, 2146, 2147, 2148, 2149, 2150, 2151, 2152, 2153, 2154, 2155, 2156, 2157, 2158, 2159, 2160, 2161, 2162, 2163, 2164, 2165, 2166, 2167, 2168, 2169, 2170, 2171, 2172, 2173, 2174, 2175, 2176, 2177, 2178, 2179, 2180, 2181, 2182, 2183, 2184, 2185, 2186, 2187, 2188, 2189, 2190, 2191, 2192, 2193, 2194, 2195, 2196, 2197, 2198, 2199, 2200, 2201, 2202, 2203, 2204, 2205, 2206, 2207, 2208, 2209, 2210, 2211, 2212, 2213, 2214, 2215, 2216, 2217, 2218, 2219, 2220, 2221, 2222, 2223, 2224, 2225, 2226, 2227, 2228, 2229, 2230, 2231, 2232, 2233, 2234, 2235, 2236, 2237, 2238, 2239, 2240, 2241, 2242, 2243, 2244, 2245, 2246, 2247, 2248, 2249, 2250, 2251, 2252, 2253, 2254, 2255, 2256, 2257, 2258, 2259, 2260, 2261, 2262, 2263, 2264, 2265, 2266, 2267, 2268, 2269, 2270, 2271, 2272, 2273, 2274, 2275, 2276, 2277, 2278, 2279, 2280, 2281, 2282, 2283, 2284, 2285, 2286, 2287, 2288, 2289, 2290, 2291, 2292, 2293, 2294, 2295, 2296, 2297, 2298, 2299, 2300, 2301, 2302, 2303, 2304, 2305, 2306, 2307, 2308, 2309, 2310, 2311, 2312, 2313, 2314, 2315, 2316, 2317, 2318, 2319, 2320, 2321, 2322, 2323, 2324, 2325, 2326, 2327, 2328, 2329, 2330, 2331, 2332, 2333, 2334, 2335, 2336, 2337, 2338, 2339, 2340, 2341, 2342, 2343, 2344, 2345, 2346, 2347, 2348, 2349, 2350, 2351, 2352, 2353, 2354, 2355, 2356, 2357, 2358, 2359, 2360, 2361, 2362, 2363, 2364, 2365, 2366, 2367, 2368, 2369, 2370, 2371, 2372, 2373, 2374, 2375, 2376, 2377, 2378, 2379, 2380, 2381, 2382, 2383, 2384, 2385, 2386, 2387, 2388, 2389, 2390, 2391, 2392, 2393, 2394, 2395, 2396, 2397, 2398, 2399, 2400, 2401, 2402, 2403, 2404, 2405, 2406, 2407, 2408, 2409, 2410, 2411, 2412, 2413, 2414, 2415, 2416, 2417, 2418, 2419, 2420, 2421, 2422, 2423, 2424, 2425, 2426, 2427, 2428, 2429, 2430, 2431, 2432, 2433, 2434, 2435, 2436, 2437, 2438, 2439, 2440, 2441, 2442, 2443, 2444, 2445, 2446, 2447, 2448, 2449, 2450, 2451, 2452, 2453, 2454, 2455, 2456, 2457, 2458, 2459, 2460, 2461, 2462, 2463, 2464, 2465, 2466, 2467, 2468, 2469, 2470, 2471, 2472, 2473, 2474, 2475, 2476, 2477, 2478, 2479, 2480, 2481, 2482, 2483, 2484, 2485, 2486, 2487, 2488, 2489, 2490, 2491, 2492, 2493, 2494, 2495, 2496, 2497, 2498, 2499, 2500, 2501, 2502, 2503, 2504, 2505, 2506, 2507, 2508, 2509, 2510, 2511, 2512, 2513, 2514, 2515, 2516, 2517, 2518, 2519, 2520, 2521, 2522, 2523, 2524, 2525, 2526, 2527, 2528, 2529, 2530, 2531, 2532, 2533, 2534, 2535, 2536, 2537, 2538, 2539, 2540, 2541, 2542, 2543, 2544, 2545, 2546, 2547, 2548, 2549, 2550, 2551, 2552, 2553, 2554, 2555, 2556, 2557, 2558, 2559, 2560, 2561, 2562, 2563, 2564, 2565, 2566, 2567, 2568, 2569, 2570, 2571, 2572, 2573, 2574, 2575, 2576, 2577, 2578, 2579, 2580, 2581, 2582, 2583, 2584, 2585, 2586, 2587, 2588, 2589, 2590, 2591, 2592, 2593, 2594, 2595, 2596, 2597, 2598, 2599, 2600, 2601, 2602, 2603, 2604, 2605, 2606, 2607, 2608, 2609, 2610, 2611, 2612, 2613, 2614, 2615, 2616, 2617, 2618, 2619, 2620, 2621, 2622, 2623, 2624, 2625, 2626, 2627, 2628, 2629, 2630, 2631, 2632, 2633, 2634, 2635, 2636, 2637, 2638, 2639, 2640, 2641, 2642, 2643, 2644, 2645, 2646, 2647, 2648, 2649, 2650, 2651, 2652, 2653, 2654, 2655, 2656, 2657, 2658, 2659, 2660, 2661, 2662, 2663, 2664, 2665, 2666, 2667, 2668, 2669, 2670, 2671, 2672, 2673, 2674, 2675, 2676, 2677, 2678, 26



To Turn the Cable Mode Off (or On)

If you have cable connected to your TV, follow the steps below to turn the cable connection off or on. Turn cable OFF when you want preset or watch VHF or UHF channels, and turn cable ON to preset or watch cable TV channels.

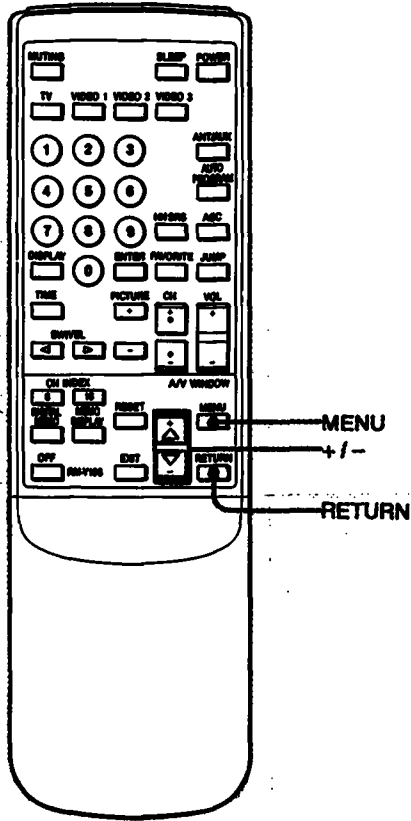

1 Press MENU.



A/V WINDOW

►VIDEO
AUDIO
GUIDE
SET UP
Use[▲ ▼]&[RETURN]
[EXIT] to quit.

2 Press +/- until ► points to "SET UP".



A/V WINDOW

VIDEO
AUDIO
GUIDE
►SET UP
Use[▲ ▼]&[RETURN]
[EXIT] to quit.

3 Press RETURN.



SET UP
►TIME SET
VIDEO LABEL
CHANNEL CAPTION
CHANNEL ERASE
CHANNEL ADD
CABLE: ON

4 Press +/- until ► points to "CABLE".



SET UP
TIME SET
VIDEO LABEL
CHANNEL CAPTION
CHANNEL ERASE
CHANNEL ADD
►CABLE: ON

5 Press RETURN.




SET UP
TIME SET
VIDEO LABEL
CHANNEL CAPTION
CHANNEL ERASE
CHANNEL ADD
CABLE: ON
Use[▲ ▼]&[RETURN]

6. Preset TV Channels

6. Preset TV Channels

6 Press + / - until the cable is turned off (or on).

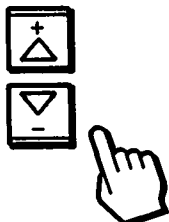

SET UP
TIME SET
VIDEO LABEL
CHANNEL CAPTION
CHANNEL ERASE
CHANNEL ADD
CABLE: OFF
Use [Δ ▽] & [RETURN]

7 Press RETURN.



SET UP
TIME SET
VIDEO LABEL
CHANNEL CAPTION
CHANNEL ERASE
CHANNEL ADD
▶ CABLE: OFF



Cable TV channel chart*

Cable TV systems use letters or numbers to designate channels. To tune in a channel, refer to the chart below.


Number on this TV	Corresponding CATV channel
1	A-8
5	A-7
6	A-6
14	A
15	B
16	C
17	D
18	E
19	F
20	G
21	H
22	I
23	J
24	K
25	L
26	M
27	N
28	O
29	P
30	Q
31	R
32	S
33	T
34	U
35	V
36	W
37	W+1
38	W+2
39	W+3
⋮	⋮
93	W+57
94	W+58
95	A-5
96	A-4
97	A-3
98	A-2
99	A-1
100	W+59
101	W+60
102	W+61
⋮	⋮
123	W+82
124	W+83
125	W+84

Check with your local cable TV company for more complete information on the available channels.


* The designation of the cable TV channels conforms to the EIA/NCTA recommendation.

To Erase TV Channels

Steps 1 – 3: Same as in “To Turn the Cable Mode Off (or On)” (page 21).

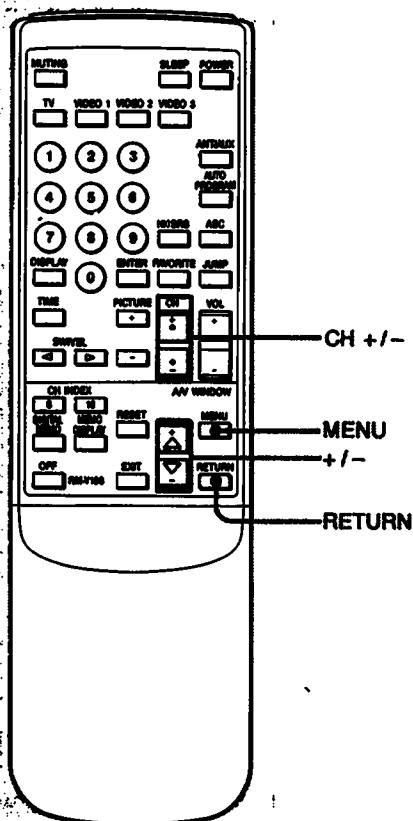

4 Press +/- until ► points to “CHANNEL ERASE”.

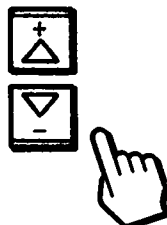

SET UP
TIME SET
VIDEO LABEL
CHANNEL CAPTION
► CHANNEL ERASE
CHANNEL ADD
CABLE: ON
Use [Δ ▽]&[RETURN]

5 Press RETURN.




ERASE

Use [CH+, -] to select the CH.

Then [RETURN] to erase.

6 Press CH +/- to set the desired channel.

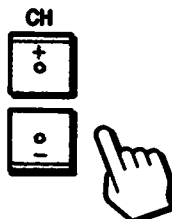

ERASE 8

Use [CH+, -] to select the CH.

Then [RETURN] to erase.

7 Press RETURN.



ERASE - 8

Use [CH+, -] to select the CH.


Then [RETURN] to erase.

The channel is erased.
If you want to erase another channel, repeat steps 6 – 7.



Note
If you have erased a VHF or UHF channel
The cable TV channel with the same number is
also erased and vice versa.


6. Preset TV Channels

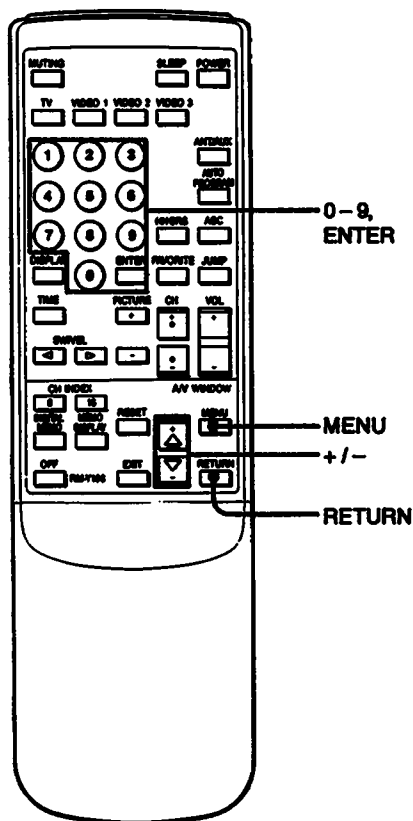

To Add TV Channels

Steps 1 – 3: Same as in “To Turn the Cable Mode Off (or On)” (page 21).

4 Press + / - until ▷ points to “CHANNEL ADD”.

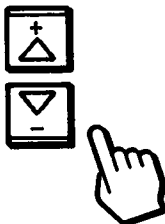

SET UP
TIME SET
VIDEO LABEL
CHANNEL CAPTION
CHANNEL ERASE
▷ CHANNEL ADD
CABLE: ON

5 Press RETURN.




ADD

Use [0-9] & [ENTER]
to select the CH.

Then [RETURN] to
add.

6 Press 0 – 9 to set the desired channel.

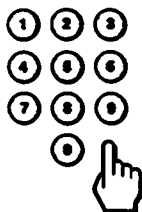

ADD 2 0

Use [0-9] & [ENTER]
to select the CH.

Then [RETURN] to
add.

7 Press ENTER.



8 Press RETURN.



ADD + 2 0

Use [0-9] & [ENTER]
to select the CH.

Then [RETURN] to
add.

The channel is added.
If you want to add another channel, repeat steps 6 – 8.

Watching TV Programs

 
1 Press POWER on the TV or the Remote Commander to turn on the TV.



2 Press ANT/AUX according to the channel to be watched.
If you want to change the cable mode, see page 00.



To view VHF,
UHF or
regular cable
TV channels



To view
pay cable
TV channels


3 Select a channel in one of the following two ways:

To scan the preset channels in
numerical sequence, press CH + / - .




To select a channel directly, press the
channel number button(s) and then
ENTER.

For example, to select channel 10, press 1,
0 and ENTER.

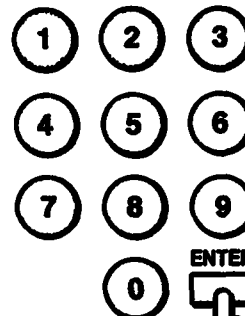

4 Press VOL + or - to adjust the volume.

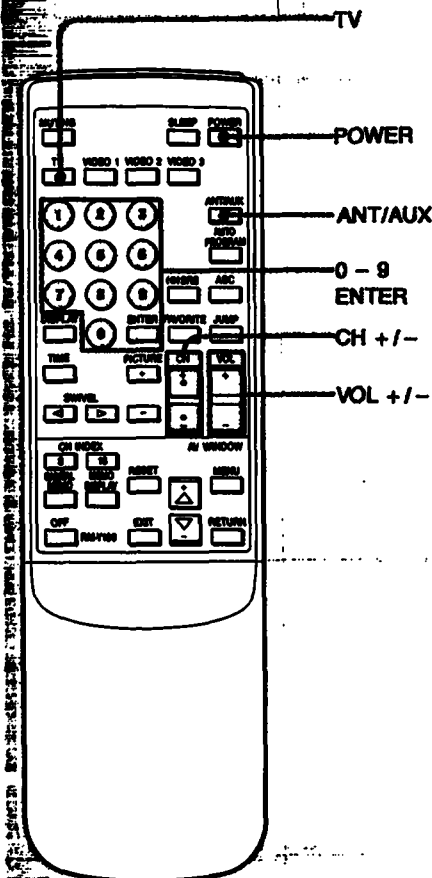


To turn off the TV
Press POWER on the TV or the Remote Com-
mander again.

If the indication "VIDEO 1, VIDEO 2, VIDEO 3,
S VIDEO, LD, or VTR" is displayed on the
screen
Press TV on the Remote Commander.

If you set the FAVORITE CHANNEL
You can choose the channels more easily.

Convenient Operations

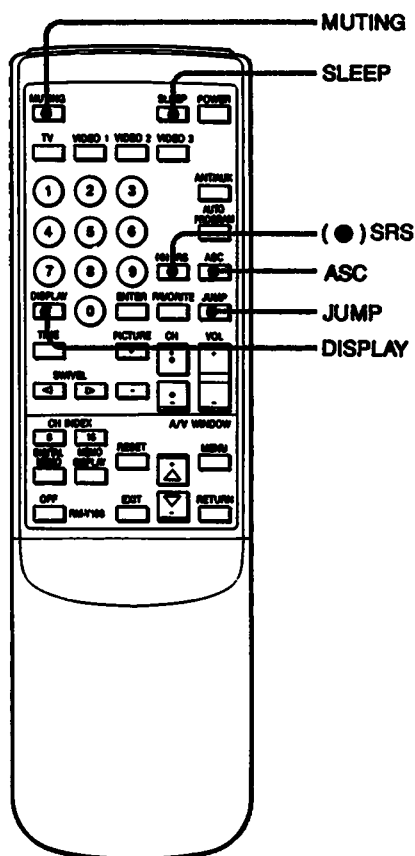

Sound

To get more natural sound reproduction

Press (●) SRS (Sound Retrieval System).

Each time you press SRS, "SRS [AUTO]", "SRS [STEREO]" or "SRS OFF" is selected in sequence.

In the SRS [AUTO] mode, the TV uses the SRS for stereo and for monaural according to the transferred signal mode.

In the SRS [STEREO] mode, the TV uses the SRS functions only when the stereo signal is transferred.

To receive a Multichannel TV sound program

Press MENU and select "AUDIO".

And select the MTS mode. For details, see page 34.

To mute the sound

Press MUTING.

The "MUTING" indication will appear on the screen.

To restore the sound, press MUTING again or VOL +.

Picture

To select the picture

Press ASC (Active Signal Correction).

Each time you press ASC, "ASC", "ASC THEATRE" or "ASC OFF" is selected in sequence.

In the ASC mode, you can watch the more vivid picture.

In the ASC THEATRE mode, you can watch the more optimum picture. So you can watch the TV more comfortably for a long time. For example, you can use this mode when you watch TV in a darkened room.

Timer

To use the SLEEP timer

Press SLEEP.

The TV goes off automatically after about an hour. The green "SLEEP ON" indication will appear on the screen for three seconds when the SLEEP button is pressed. And the red "SLEEP" indication will appear one minute before the TV is turned off automatically.

To cancel the SLEEP timer

Press SLEEP again. The "SLEEP OFF" indication will appear three seconds before the SLEEP timer is canceled.

Only for KV-32XBR75

The SLEEP indicator on the TV will remain lit until the TV is turned off.

Channel

To keep the channel displayed

Press DISPLAY.

To make the channel display disappear, press DISPLAY again.


To switch quickly between two channels

Press JUMP.

Each time JUMP is pressed, the channel which appeared on the screen directly before is recalled. This button enables you to keep track of two programs alternately. JUMP also switches programs in the ANT/AUX mode.

Adjusting the Picture and Sound


You can adjust the picture and sound levels and store the adjustment levels in memory for each input mode (TV, VIDEO 1/2/3).

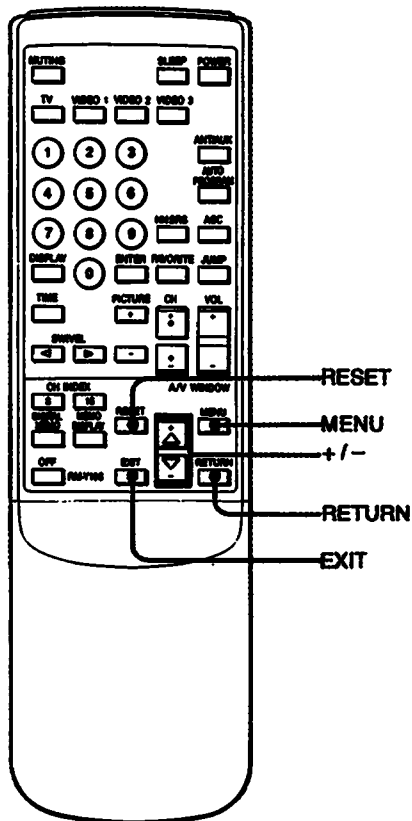

Adjusting the Picture


Adjusting HUE, COLOR, BRIGHT (brightness), SHARP (sharpness)
Press MENU.

1 Press MENU.


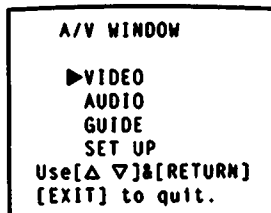


2 Make sure ▶ points to "VIDEO".

3 Press RETURN.
"VIDEO" is selected.

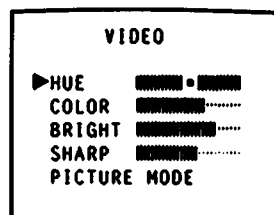

4 Press + / - until ▶ points to the item you want to adjust.

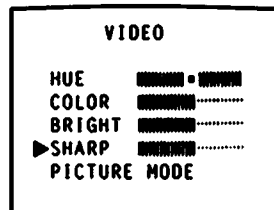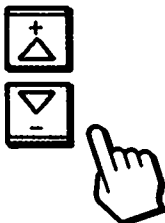

5 Press RETURN.



6 Press + / - to adjust the item.




The function of + / - for each item

	Press - to:	Press + to:
HUE	make skin tones purplish	make skin tones greenish
COLOR	decrease color intensity	increase color intensity
BRIGHT	darken the picture	brighten the picture
SHARP	soften the picture	sharpen the picture

7 Press RETURN.

RETURN

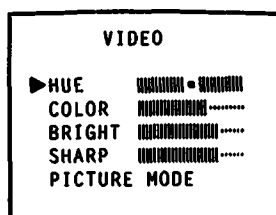

If you want to adjust other items, repeat steps 4 - 7 until you get a satisfactory picture.




To restore the normal picture
Press EXIT.

To clear the adjustment levels and restore the
factory preset levels at once
Display the "VIDEO" page and press RESET,
then EXIT.

For models with the picture-in-picture
function:

- You cannot adjust HUE and COLOR when the picture is stored.
- You cannot adjust SHARPNESS, NR and NOTCH control for SPLIT picture and 16 window pictures.


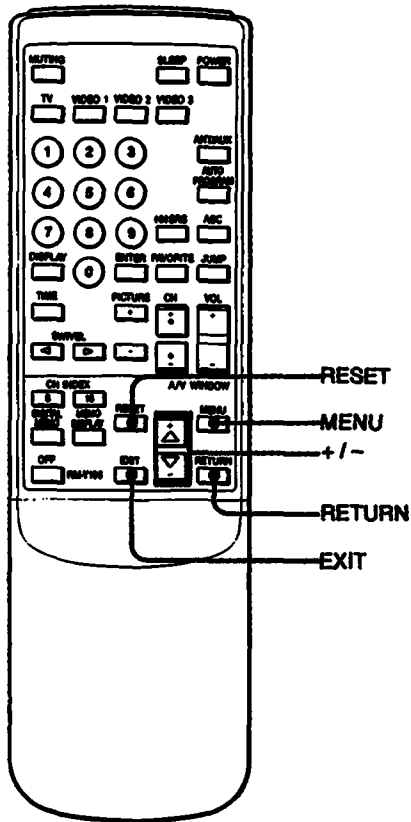


Note
NOTCH adjustment is not unnecessary for the KV-29XBR85. Digital/Intelligent Color Pure Filter™ adjusts dots or stripes when you watch the picture from the VCR or the computer.


Adjusting NOTCH, NR (Noise Reduction) and TRINITONE.

1 Press MENU and select "VIDEO" with +/–, then press RETURN.



2 Press +/– until ▷ points to "PICTURE MODE".

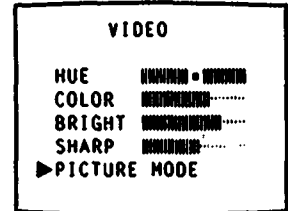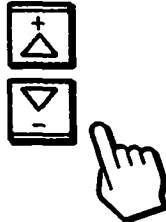


3 Press RETURN.

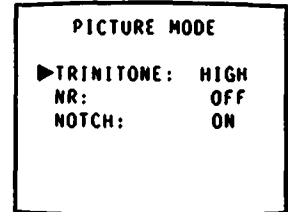

4 Press +/– until ▷ points to the item you want to adjust.

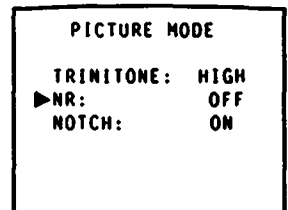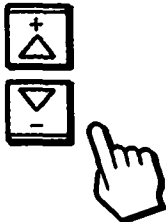

5 Press RETURN.

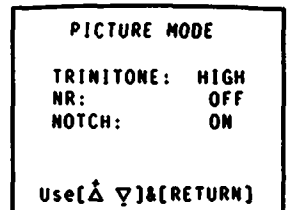

6 Press + / - to select the desired condition of the item.



PICTURE MODE

TRINITONE: HIGH

NR: ON

NOTCH: ON

Use[Δ ▽]&[RETURN]

The object of ON/OFF (HIGH/LOW) for each item

	Set to ON (HIGH) to:	Set to OFF (LOW) to:
NOTCH	adjust dots or stripes when you watch the picture from the VCR or the computer	(normal picture)
NR	reduce picture noise	(normal picture)
TRINITONE	make picture cool (bluish)	make picture warm (reddish)



To adjust picture contrast

Press to increase picture contrast with vivid color.



PICTURE



Press to decrease picture contrast with soft color.

The picture contrast level cannot be memorized under each input mode.

7 Press RETURN.

RETURN



PICTURE MODE

►TRINITONE: HIGH


NR: ON

NOTCH: ON


If you want to adjust other items, repeat steps 4 – 7 until the picture is satisfactory.

Adjusting the Sound



Adjusting TREBLE, BASS, BALANCE

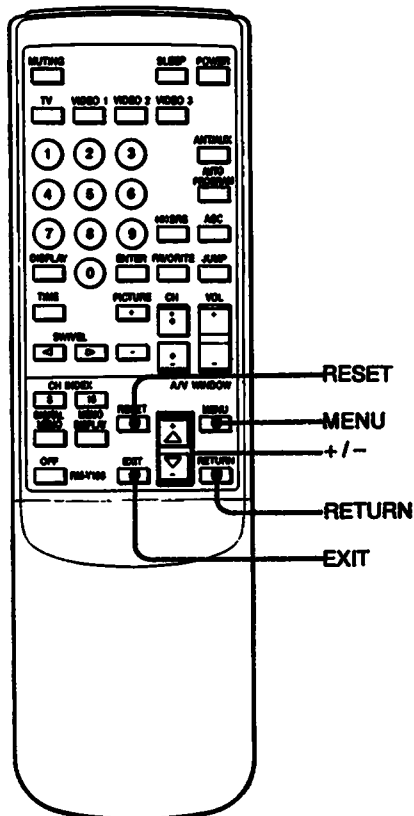


1 Press MENU.

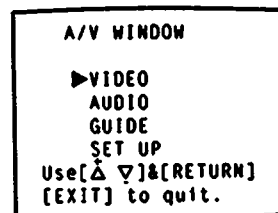



2 Press + / - until ▷ points to "AUDIO".

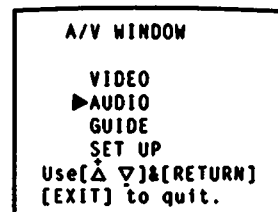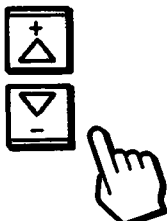

3 Press RETURN.

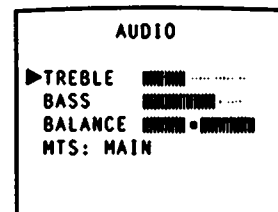


4 Press + / - until ▷ points to the item you want to adjust.

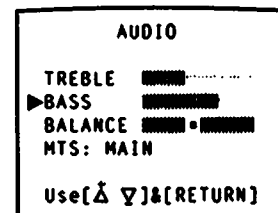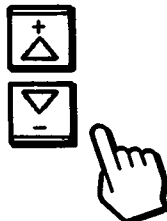

5 Press RETURN.



6 Press + / - until the item is adjusted.

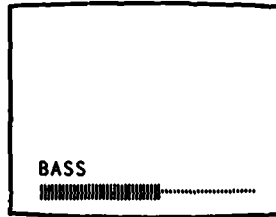

The function of + / - for each item

	Press - to:	Press + to:
TREBLE	decrease the treble response	increase the treble response
BASS	decrease the bass response	increase the bass response
BALANCE	emphasize the left speaker's volume	emphasize the right speaker's volume




To restore the normal picture
Press EXIT.


To clear the adjustment levels and restore the
factory preset levels at once
Display the "AUDIO" page and press RESET,
then EXIT.

7 Press RETURN.

RETURN

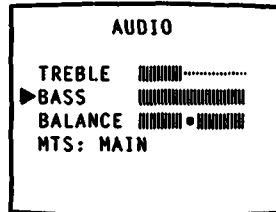

If you want to adjust other items, repeat steps 4 - 7 until you get a satisfactory sound with the three items.

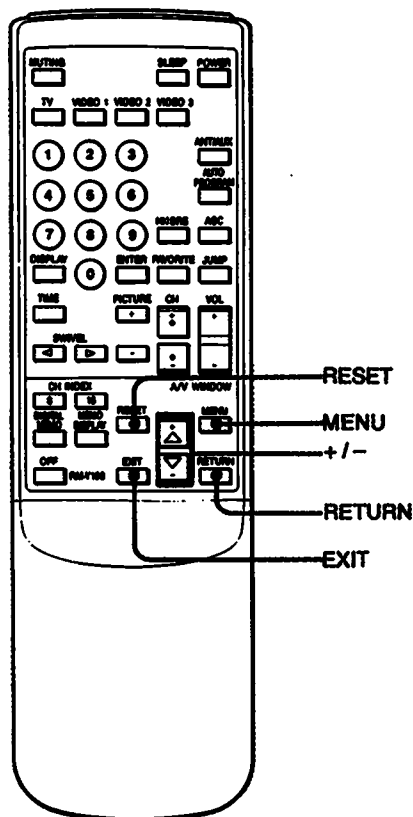

To restore the normal picture
Press EXIT.

If you press RESET during the "AUDIO" page
is displayed
The MTS mode is not affected.

The three modes of MTS



Selecting MTS (Multichannel TV Sound program) mode



To listen to stereo sound, select the MAIN mode so that the on-screen MAIN indication appears. The STEREO indicator on the TV lights up whenever a stereo broadcast is received.

To listen to the second audio program, select the SAP mode.


There may be cases of stereo broadcasts where excessive noise will be heard due to a weak incoming signal. You may be able to eliminate this noise by selecting the MONO mode.

1 Press MENU and select "AUDIO" with + / - , then press RETURN.



2 Press + / - until > points to "MTS".

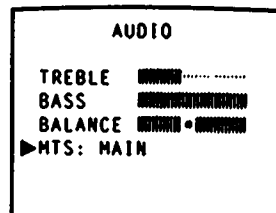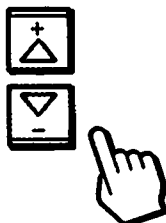


3 Press RETURN.

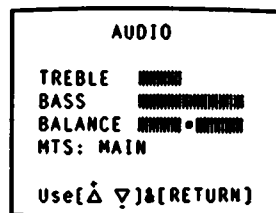

4 Press + / - to select MAIN, SAP or MONO.

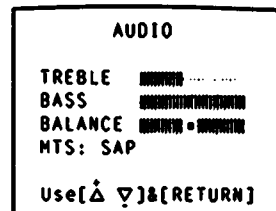
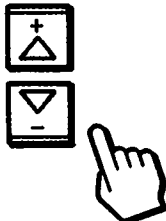


5 Press RETURN.

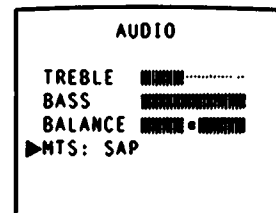

Adjusting the Swivel (necessary only for KV-29XBR85)

TV top view

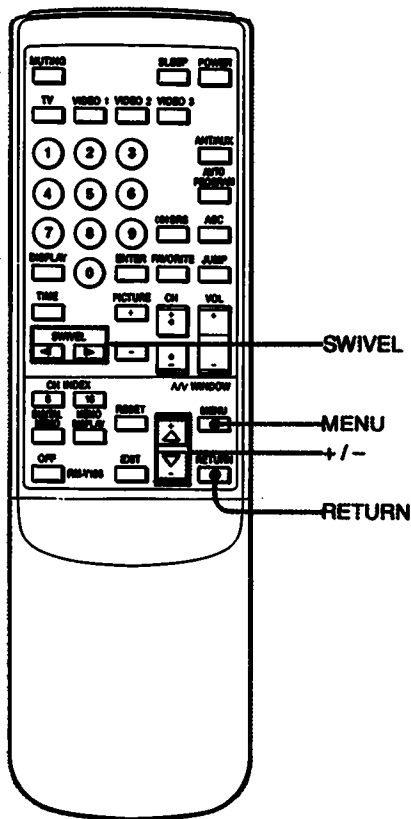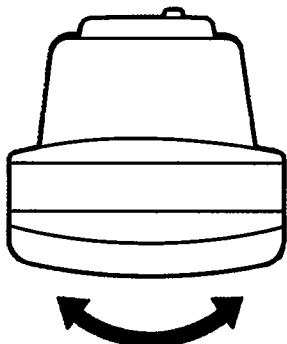

Press **SWIVEL** to swivel the TV.
You can adjust the angle by 15 degrees in each direction.

Activating Degaussing


When you use the **SWIVEL** function, the picture may suffer from color shading. If this occurs, you can adjust it by activating the degauss function.

1 Press **MENU**.



A/V WINDOW
▶VIDEO
AUDIO
GUIDE
SET UP
Use[]&[RETURN]
[EXIT] to quit.

2 Press **+/-** until points to "GUIDE".

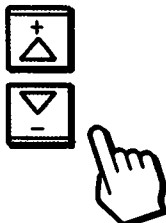

A/V WINDOW
VIDEO
AUDIO
▶GUIDE
SET UP
Use[]&[RETURN]
[EXIT] to quit.

3 Press **RETURN**.



GUIDE
▶ON/OFF TIMER
CHANNEL BLOCK
FAVORITE CHANNEL
DEGAUSS

4 Press **+/-** until points to "DEGAUSS".



GUIDE
ON/OFF TIMER
CHANNEL BLOCK
FAVORITE CHANNEL
▶DEGAUSS

5 Press **RETURN**.



The degauss function is activated.



On activating degauss

When you swivel the screen right after activating the degauss function, wait for 5 minutes or more before activating it again.

During activating degaussing

The picture may be confused.

When rotating the TV on its swivel

Be careful that the corners of the TV casing do not hit obstructions, thus marring the finish.

Watching Two or More Channels at the Same Time (The models

You can watch two or more channels at the same time.

- **When watching two channels (the main picture and a window picture)**

You can:

- swap the main and the window picture.
- change the position of the window picture.
- replay the main picture displayed 2 seconds before in the window picture.
- split the screen with the main and the window picture.
- store a TV picture.

- **When watching more channels (the main picture and several window pictures)**

You can:

- watch 8 different channels
- watch 16 different channels

- **You can scan other channels**




For KV-32XBR75

When you press MULTI PICTURE on the TV, the picture-in-picture features will be demonstrated.


To cancel the demonstration, press OFF.

Preparation

- 1 Slide the cover of the supplied Remote Commander.

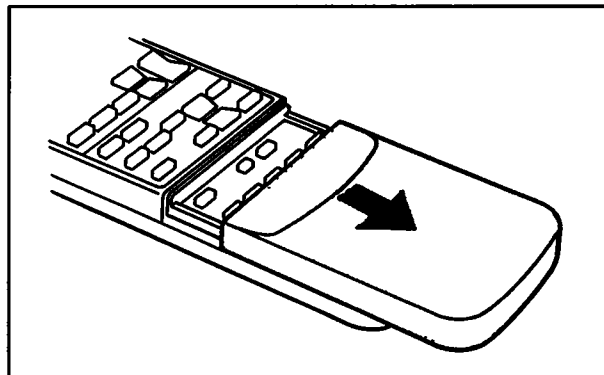

- 2 Flip down the panel to use the picture-in-picture area.

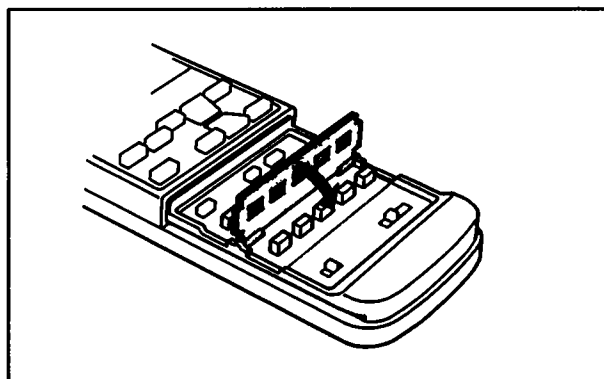


equipped with this functions are: KV-27XBR55/KV-32XBR55/KV-32XBR75/KV-29XBR85)

Watching a Window Picture


Besides the main picture, you can watch another TV channel (including CATV) or a video source simultaneously in a window picture.

You can enjoy the convenience of the "picture-in-picture" function when there are two TV channels you want to watch at the same time or when you want to monitor your VCR while watching TV, etc.

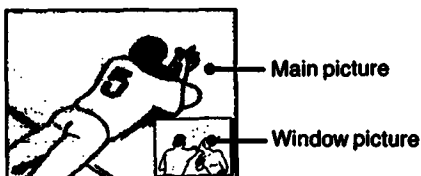

To display a TV program in a window

Press PIP.

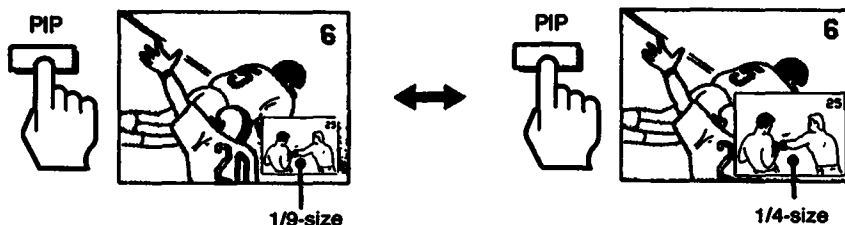

The window picture in the last mode you watched will appear. Each time PIP is pressed, a 1/4-size or 1/9-size window picture will appear alternately.



To make the window picture disappear
Press OFF.

To scan programs in the window picture
Press CH + / - in the picture-in-picture area.

Notes on the window picture

- In the window picture, the VIDEO LABEL and CHANNEL CAPTION will not appear even if you have set them.
- If a window picture is blocked, the "B" indication will appear on the window screen. (See page 56.)

To hear the sound for the window picture

Press AUDIO.

To hear the sound for the main picture, press AUDIO again.

- The sound of the window picture is also output from the VARIABLE AUDIO OUT.

(The MONITOR OUT outputs the sound of the main picture only.)

- The sound for the window picture is monaural when you use the RFU output.
- When you press AUDIO, the "♪" indication appears and you can know the sound comes from which.

To swap the main and the window pictures


Press SWAP.

Watching a Window Picture (continued)

To display VIDEO input picture in a window

You can watch VIDEO input picture (either playback picture or TV program from VCR tuner) using picture-in-picture.


If you want to control your VCR with the supplied Remote Commander, see page 59.

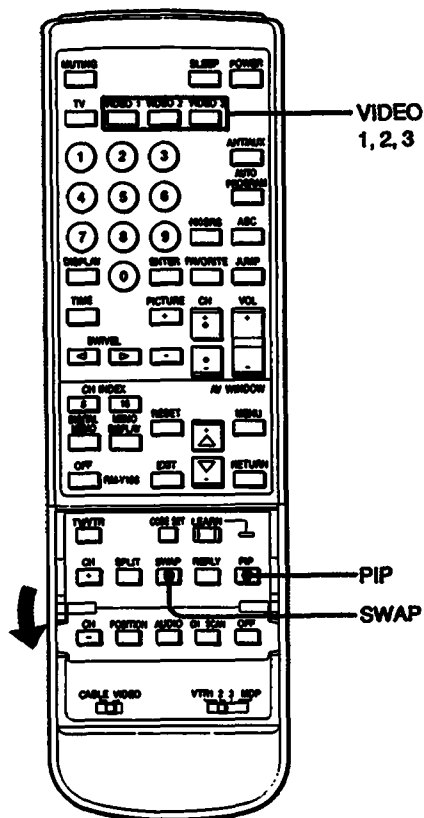


1 Press PIP.



2 Press VIDEO 1, 2, or 3 to select the desired input mode. You can only change the VIDEO input mode in the main picture.

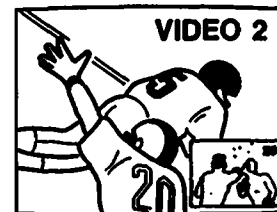

3 Press SWAP so that the VIDEO input picture becomes a window picture.

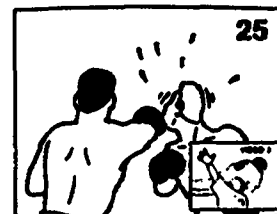


With the supplied Remote Commander
You cannot control VCR without settings.

To change the VIDEO input mode, press SWAP again to swap with the main picture.

To display pay cable TV in a window

If you use a cable converter box, make proper connection for using picture-in-picture first.

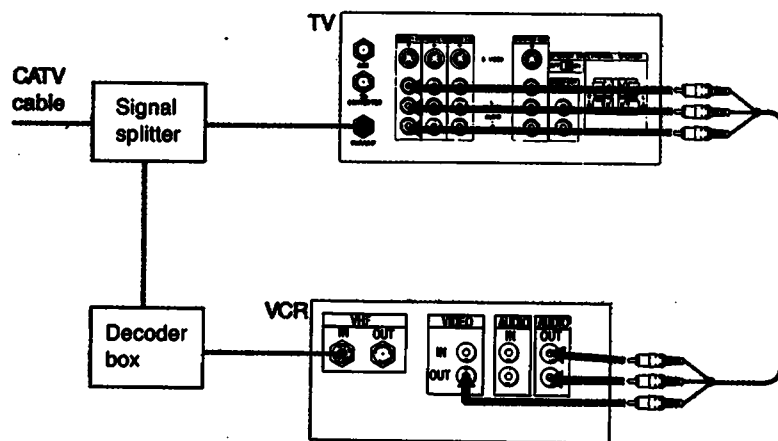Connection

If you want to control your VCR or decoder box with the supplied Remote Commander See page 59 and 62.

If you connect your decoder box to the AUX terminal
You can watch the SPLIT and REPLAY picture only.

Operation

Steps 1 – 3: same as in "To display VIDEO input picture in a window" (page 38).

4

Put your VCR on an inactive channel (3CH or 4CH).


5

Change pay cable TV channels with the decoder box.


Watching Two or More Channels at the Same Time

Advanced Operation of a Window Picture


To change the position of a window picture

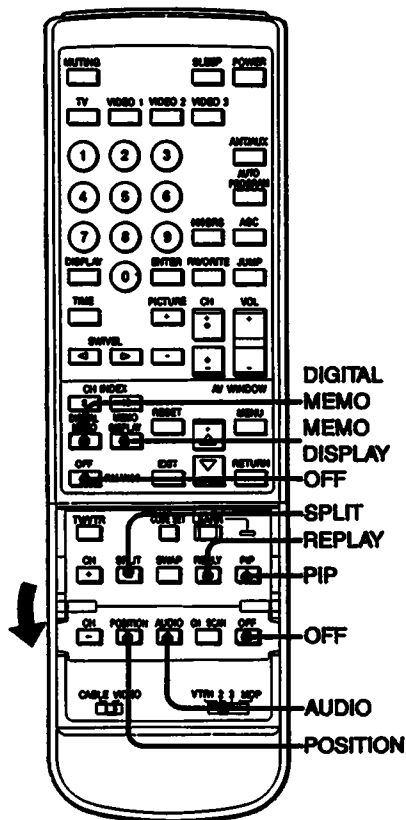

1 Press PIP.

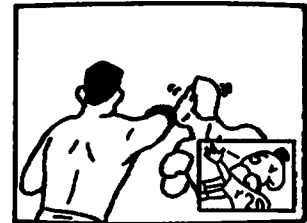

2 Press POSITION.
Each time you press POSITION,
the window picture will move as
illustrated.

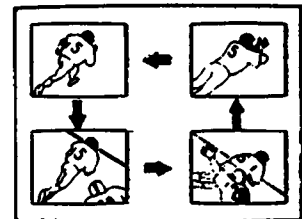


To replay the main picture displayed 2 seconds before in the window picture

Press REPLAY.



Note
On replay picture
The replay picture is always displayed in 1/9 size.

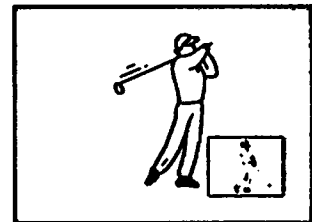

To make the replay picture disappear, press OFF.

To store a TV picture

You can store a desired picture in the memory of this TV. You can recall the stored picture.

Storing the picture is convenient when you want to write down a recipe of a cooking program or a displayed toll free number, etc.

Press **DIGITAL MEMO**.

The TV picture will be stored.



To restore the normal picture

Press **MEMO DISPLAY**.



When you press **MEMO DISPLAY**, the screen changes from the stored picture to the normal picture.

To recall the stored picture

Press **MEMO DISPLAY** again.




The memory of the stored picture is kept except for the following cases:

- when the TV is turned off.
- when another picture-in-picture function is used.
- when you press **OFF** twice.

To split the screen between the main picture and the window picture

Press **SPLIT**.

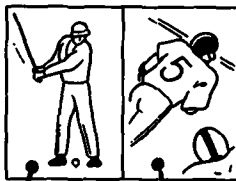

Window picture Main picture



To make the window picture disappear
Press **OFF**.


To hear the sound for the window picture
Press **AUDIO**.

When using the split-screen feature
Vertical lines may appear to you to be elongated.



Watching Two or More Channels at the Same Time

Scanning Other Channels

Press CH (channel) SCAN.

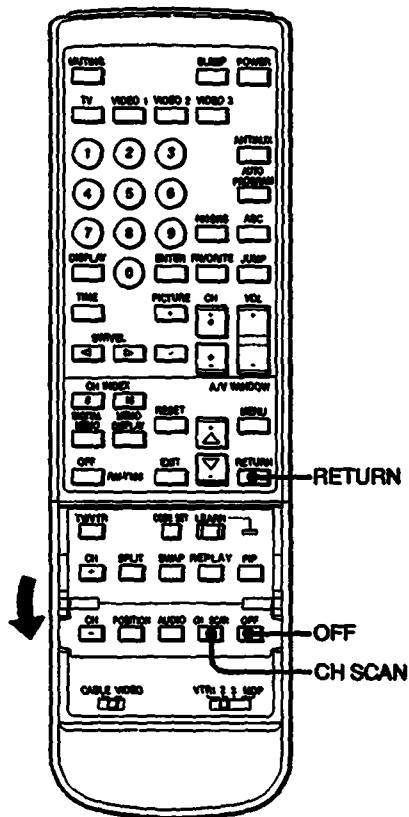

CH SCAN

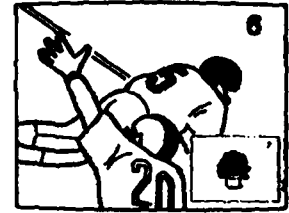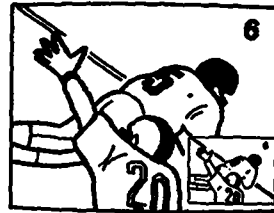

Each channel appears in the window picture for 3 seconds sequentially.

To watch the channel in the window picture continuously.
Press RETURN while the desired channel is in the window picture.

Press RETURN.

RETURN





To cancel CHANNEL SCAN
Press OFF.

Watching Several Window Pictures Simultaneously

To display 8 different channels
(the main picture and 7 window pictures)


Press CH INDEX 8.

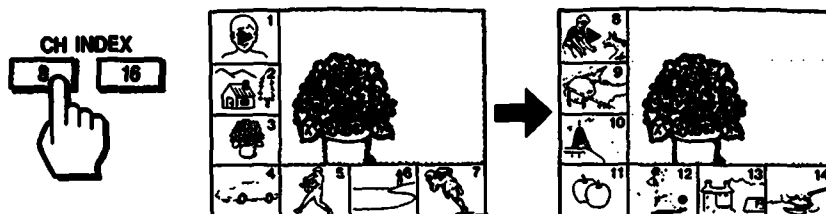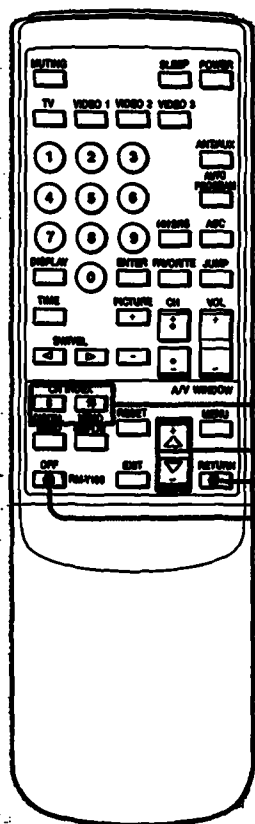

Programs of seven TV channels appear in numerical sequence as window pictures. Each time you press CH INDEX 8, the next seven sequential channels will appear.


To watch one of the window pictures

1 Position ► in the window screen of the desired channel by pressing the +/- buttons.

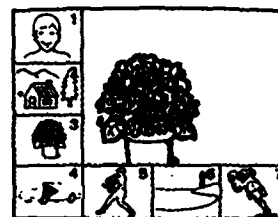

2 Press RETURN.

RETURN

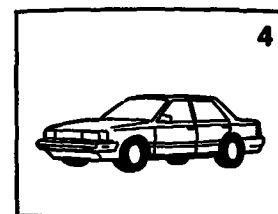

The chosen channel will appear as the main picture.

To cancel CH INDEX 8, press OFF.




Watching Two or More Channels at the Same Time



Note
When you use the CH INDEX 8 function, part of the main picture is covered by the window pictures.

To display 16 different channels as window pictures


Press CH INDEX 16.

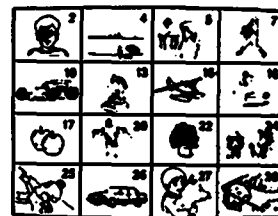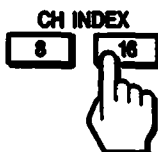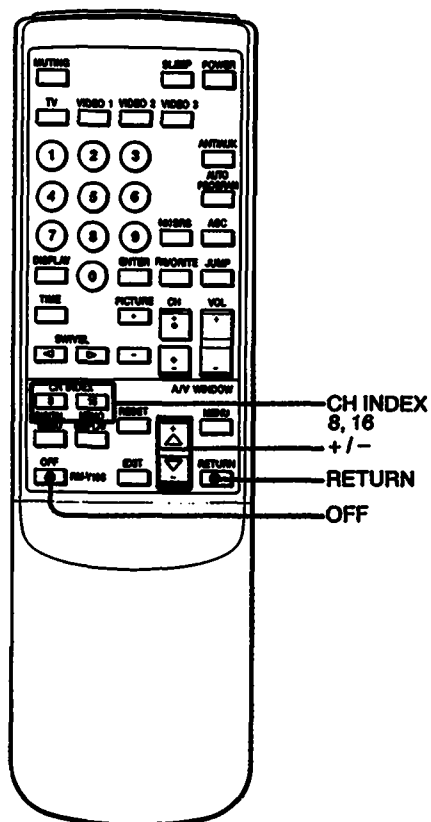

Programs of 16 different TV channels appear in numerical sequence as window pictures. Each time you press CH INDEX 16, the next 16 channels will appear.

To watch one of the window pictures


- 1 Position ▸ in the window screen of the desired channel by pressing the +/- buttons.

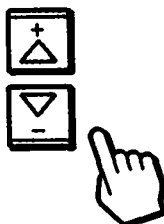

- 2 Press RETURN.



The chosen channel will appear.

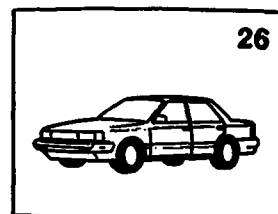


To cancel CH INDEX 16, press OFF.

Setting up on the Screen

To be continued ►


You can call up the on-screen menu and instructions on how to set the clock, to label each video input mode, or to caption the TV stations.

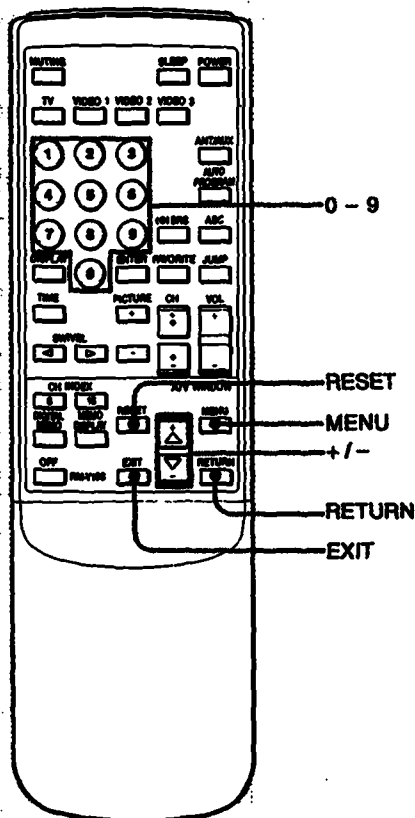



Setting the Clock

Example: To set the time to 3:15 PM, Monday.

1 Press MENU

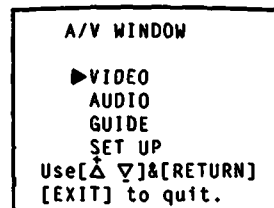


2 Press +/- until ► points to SET UP.

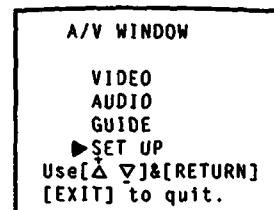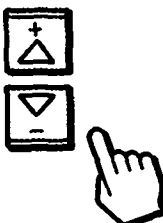

3 Press RETURN.




4 Press RETURN again to select "TIME SET".

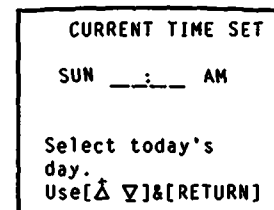

- If you unplug the TV, or if a power failure occurs, all settings will be erased from the TV's memory.
- If you have not set the clock correctly, the ON/OFF TIMER and CHANNEL BLOCK will not operate.

Watching Two or More Channels at the Same Time / Setting up on the Screen

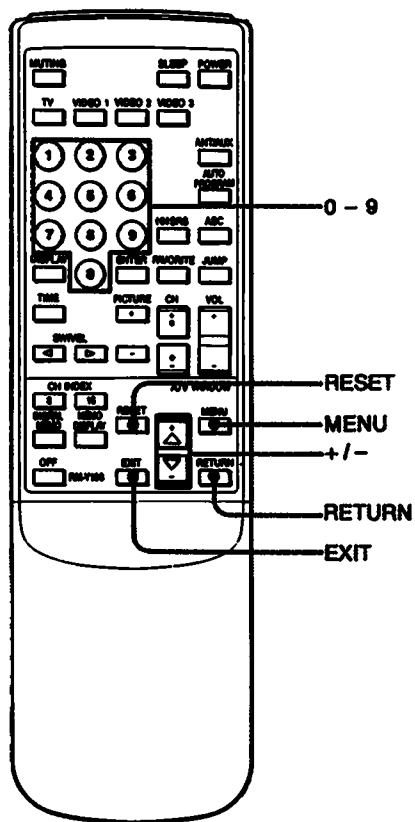

On the clock

The internal clock of this TV operates on a 12-hour cycle. If you enter 24-hour cycle number, it will be cleared when you press RETURN.

12:00 AM stands for midnight.
12:00 PM stands for noon.

5 Press + / - until the day of the week you want to set appears.



CURRENT TIME SET

MON _ _ : _ _ AM

Select today's
day.
Use[Δ ∇]&[RETURN]

6 Press RETURN.

RETURN




CURRENT TIME SET

MON _ _ : _ _ AM

Set the current
time.
Use[0-9]&[RETURN]

7 Press 0 - 9 to set the desired time.
(For 3:15, press 0 3 1 5)

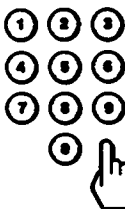

CURRENT TIME SET

MON _ 3 : 15 AM

Set the current
time.
Use[0-9]&[RETURN]

8 Press RETURN.

RETURN



CURRENT TIME SET

MON 3 : 15 AM

Set AM or PM.
Use[Δ ∇]&[RETURN]

9 Press + / - to set AM or PM.




CURRENT TIME SET

MON 3 : 15 PM

Set AM or PM.
Use[Δ ∇]&[RETURN]

10 Press RETURN.

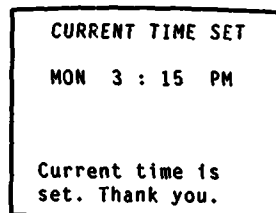

The moment you press RETURN, the clock starts.
Now the time is set. The indication will disappear after approx. 10 seconds.




To restore the normal picture
Press EXIT.

To clear the current time setting
Display the "CURRENT TIME SET" page and press RESET, then EXIT.

To reset the setting
Display the "CURRENT TIME SET" page and press RESET, then repeat steps 5 to 10.

To display the current time
Press TIME.

Setting up on the Screen

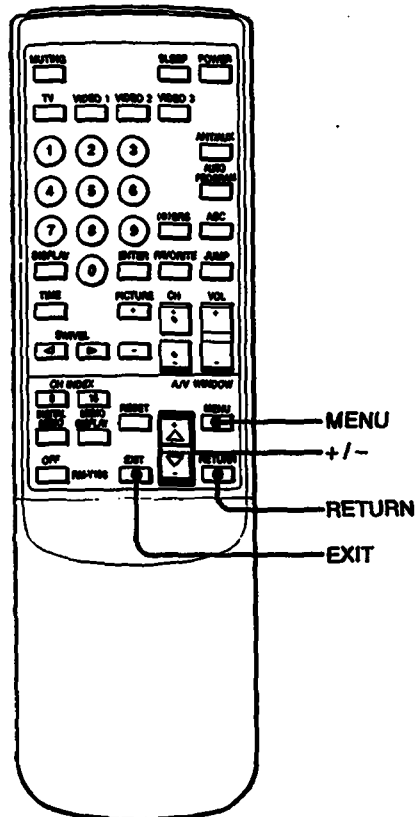


Labeling Each Video Input Mode


You can label each input mode as VTR, S VIDEO, or LD to easily identify what equipment is connected to which input terminal. When you enter the label, the TV automatically adjusts itself internally to enhance the picture quality for the labeled equipment.

Example: Label VIDEO 1 with S VIDEO.


1 Press MENU

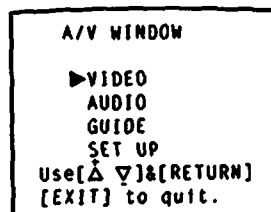



2 Press +/- until ▷ points to "SET UP".

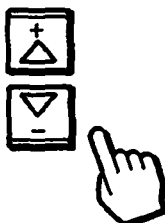


3 Press RETURN.

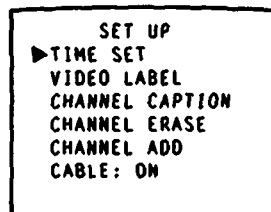

4 Press +/- until ▷ points to "VIDEO LABEL", then RETURN.

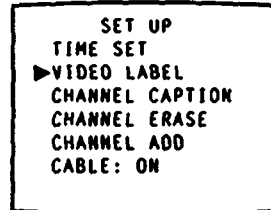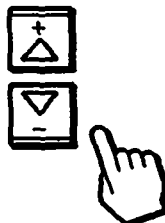

- 5** Press +/ - until ► points to your desired input terminal.

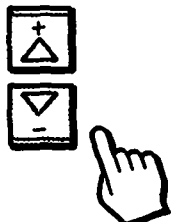

VIDEO LABEL

►VIDEO 1: VIDEO 1
VIDEO 2: VIDEO 2
VIDEO 3: VIDEO 3
DIRECT PLAY



To restore the normal picture
Press EXIT.

- 6** Press RETURN.



VIDEO LABEL

►VIDEO 1: VIDEO 1
VIDEO 2: VIDEO 2
VIDEO 3: VIDEO 3
DIRECT PLAY


- 7** Press RETURN.
Then "VIDEO 1" on the right turns red.



VIDEO LABEL

VIDEO 1: VIDEO 1
VIDEO 2: VIDEO 2
VIDEO 3: VIDEO 3
DIRECT PLAY
Use[Δ ▽]&[RETURN]
to select.

- 8** Press +/ - until the label you want appears.

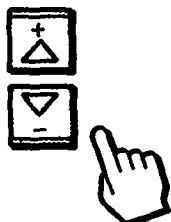

VIDEO LABEL

VIDEO 1: S VIDEO
VIDEO 2: VIDEO 2
VIDEO 3: VIDEO 3
DIRECT PLAY
Use[Δ ▽]&[RETURN]
to select.


- 9** Press RETURN.



VIDEO LABEL

►VIDEO 1: S VIDEO
VIDEO 2: VIDEO 2
VIDEO 3: VIDEO 3
DIRECT PLAY

If you want to label VIDEO 2 or 3, repeat steps 5-9.
Now, VIDEO LABEL is set.

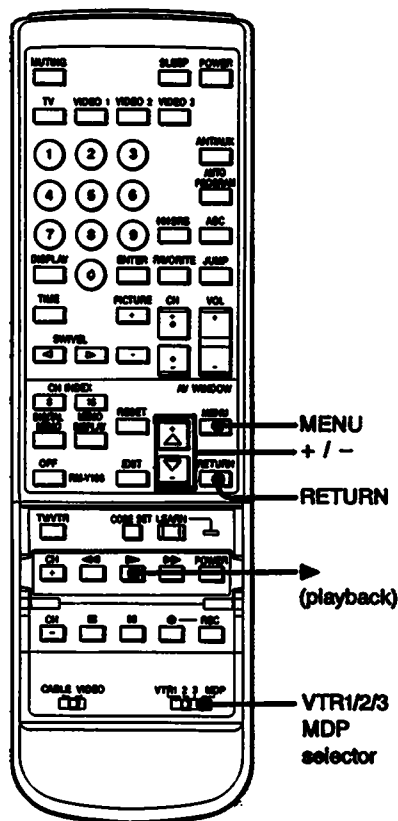

Direct Play Function


With this function, you can change the input mode from TV to VCR by pressing the ► (playback) button on the supplied Remote Commander.

Example: When you connect your VCR to the VIDEO 1 IN jacks and control the VCR when the VTR1/2/3 MDP selector is set to VTR2 on the supplied Remote Commander.

First, the TV needs to memorize the VTR selector position on the Remote Commander which you use to control your VCR.

Step1-4: Same as in "Labeling Each Video Input Mode" (page 48.)

5 Press + / - until ► points to "DIRECT PLAY".

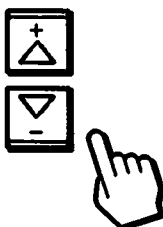

VIDEO LABEL

VIDEO 1: S VIDEO
VIDEO 2: VIDEO 2
VIDEO 3: VIDEO 3
►DIRECT PLAY

6 Press RETURN.



If you have not set the manufacturer's code yet, see page 60 and set it. (When you use Sony video equipment, this setting is not necessary. For details, see page 59)

DIRECT PLAY

Program your remote with "pre-set code" before using DIRECT PLAY feature.


7 Press RETURN



DIRECT PLAY

►VIDEO 1: OFF
VIDEO 2: OFF
VIDEO 3: OFF
VIDEO LABEL

- 8** Press +/ – until ► points to your VCR input.
(If you connected your VCR to VIDEO 1 IN jacks, make ► point to "VIDEO 1".)

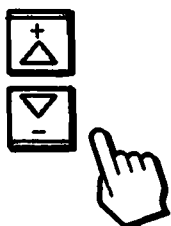

DIRECT PLAY

►VIDEO 1: OFF
VIDEO 2: OFF
VIDEO 3: OFF
VIDEO LABEL



To restore the normal picture
Press EXIT.


- 9** Press RETURN.



DIRECT PLAY

VIDEO 1: OFF
VIDEO 2: OFF
VIDEO 3: OFF
VIDEO LABEL
Use[▲ ▼]&[RETURN]
to select.

- 10** Press +/ – until the VTR selector mode that you control your VCR at appears.
(If you control your VCR at VTR 2 in the Remote Commander, make "VTR 2" appear.)

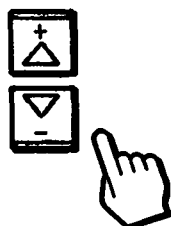

DIRECT PLAY

VIDEO 1: VTR2
VIDEO 2: OFF
VIDEO 3: OFF
VIDEO LABEL
Use[▲ ▼]&[RETURN]
to select.

- 11** Press RETURN.



DIRECT PLAY


►VIDEO 1: VTR2
VIDEO 2: OFF
VIDEO 3: OFF
VIDEO LABEL

If you connect other video equipment, repeat steps 8-11.
Now, direct play setting is set.

When you are watching a VCR picture, as you press the ► (playback) button, the input mode changes from TV to VCR.

Example: When you set the VTR1/2/3 MDP selector to VTR2 and press ►, the input mode changes to the VCR that is connected to the VIDEO 1 IN jacks.

Setting up on the Screen

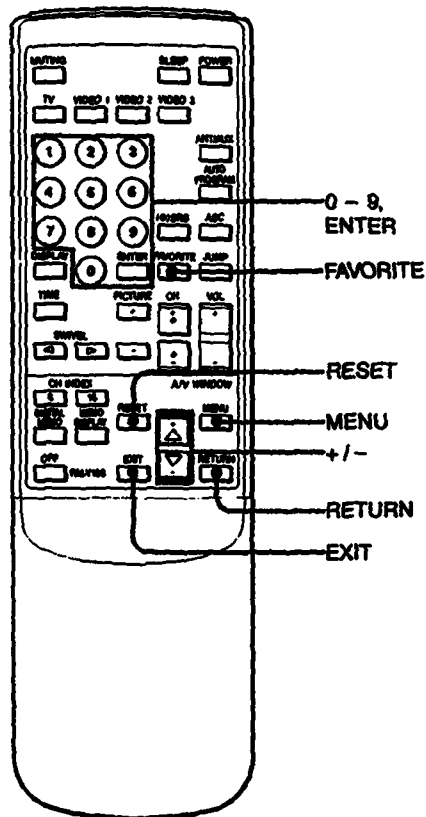


Captioning the TV Stations



You can assign a station name using up to four characters to up to 32 program positions to identify the received channel for display on the screen together with the program position number.

Example: To assign "ABC" to channel 15.


1 Press MENU.

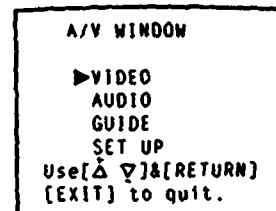



2 Press +/- until ► points to "SET UP".

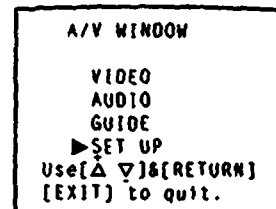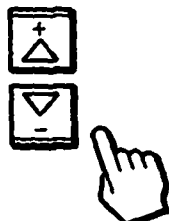

3 Press RETURN.

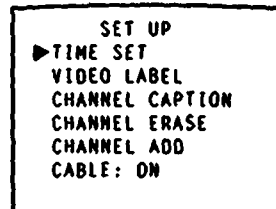

4 Press +/- until ► points to "CHANNEL CAPTION".

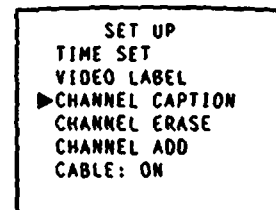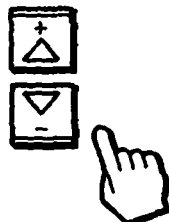

Note
When the memory is full, the indication "The memory is full, sorry" appears.
In this case, clear the unnecessary settings.

5 Press RETURN.




CHANNEL	---
CAPTION	---
Enter the CH to be captioned. Use[0-9]&[ENTER].	



To restore the normal picture
Press EXIT.

To clear the setting
Display the "CHANNEL CAPTION" page and
press RESET, then EXIT.

6 Press 0 – 9 to set the channel to be captioned. (For 15, press 1, then 5.)

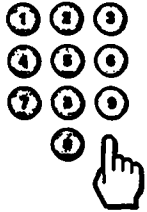


CHANNEL	15
CAPTION	---
Enter the CH to be captioned. Use[0-9]&[ENTER].	

7 Press ENTER.



CHANNEL	15
CAPTION	----
Select the 1st letter. Use[Δ ▽]&[RETURN]	

8 Press + / – until the letter or number you want appears.

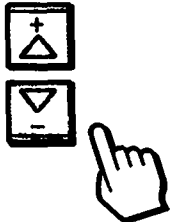

CHANNEL	15
CAPTION	A---
Select the 1st letter. Use[Δ ▽]&[RETURN]	

9 Press RETURN.



CHANNEL	15
CAPTION	AB--
Select the 2nd letter. Use[Δ ▽]&[RETURN]	

10 Repeat steps 8 and 9 for selecting other letters. (For "ABC", select "B", "C", then select blank.) Now the CHANNEL CAPTION is set. If you want to caption more stations, press RETURN.


CHANNEL	15
CAPTION	ABC
Press [RETURN] to continue.	

Setting Timer-Activated Functions


Setting the ON/OFF Timer

You can make three programs of your choice appear on the screen at the desired time with the ON/OFF timer.


Example: Set the timer to turn on the TV to channel 8 at 1:30 AM for 3 hours every Monday through Friday as PROGRAM 1.

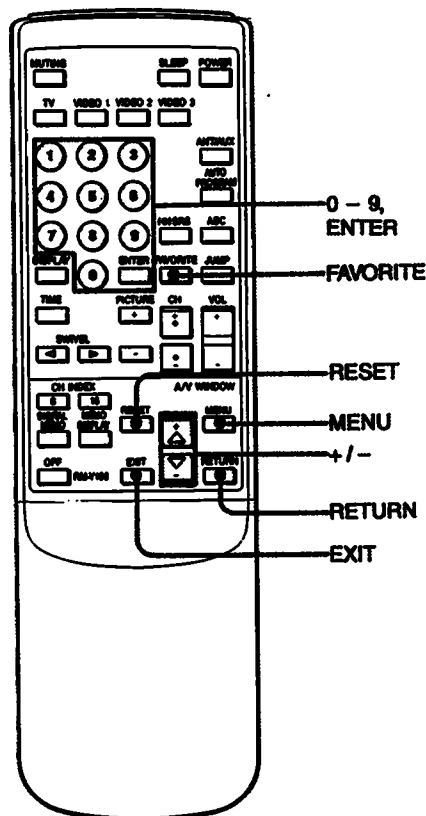

1 Press MENU.

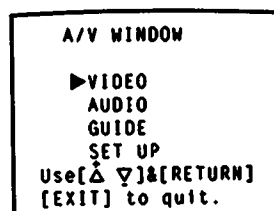


2 Press + / - until ► points to "GUIDE", then RETURN.

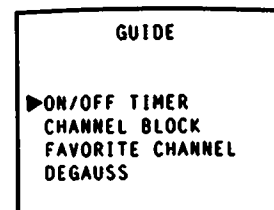


* "DEGAUSS" appears on KV-29XBR85 only.

3 Make sure ► points to "ON/OFF TIMER", then press RETURN.

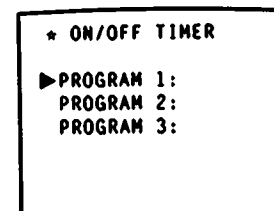

4 Make sure ► points to "PROGRAM 1" (for PROGRAM 2 and 3, press + / - to select the desired one), then press RETURN.

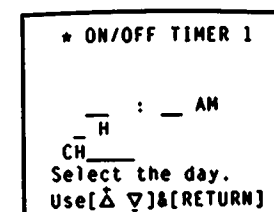

To restore the normal picture
Press EXIT.

To clear the setting
Display the "ON/OFF TIMER" page and press RESET, then EXIT.

- 5** Press + / - until the day of the week you want appears, then press RETURN.




RETURN



ON/OFF TIMER 1
 EVERY SUN-SAT
 : AM
 H
 CH
 Set the time.
 Use [0-9] & [RETURN]

- 6** Press 0 - 9 to set the time you want, (For 1:30, press 0 1 3 0.) then press RETURN.

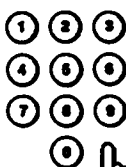

RETURN



ON/OFF TIMER 1
 EVERY SUN-SAT
 1 : 30 AM
 H
 CH
 Set AM or PM.
 Use [Δ ▽] & [RETURN]

- 7** Press + / - to set AM or PM, then RETURN.




RETURN



ON/OFF TIMER 1
 EVERY SUN-SAT
 1 : 30 AM
 H
 CH
 Set the duration.
 Use [0-9] & [RETURN]

- 8** Press 1 - 9 to set the duration, then RETURN.

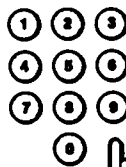


RETURN



ON/OFF TIMER 1
 EVERY SUN-SAT
 1 : 30 AM
 3 H
 CH
 Set the channel.
 Use [0-9] & [RETURN]

- 9** Press 0 - 9 to set the channel number you want, then RETURN.

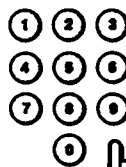

RETURN



ON/OFF TIMER 1
 :
 EVERY SUN-SAT
 1 : 30 AM
 3 H
 CH 8
 Press [RETURN]
 to continue.

Notes



If you have not set the **CURRENT TIME** yet


The following message will appear.
 Go back to page 45 to set the clock.

Current time is
 not set.

Press [RETURN]
 to set the time.

The selectable days of the week

When you press +, the selectable days of the week will appear in the following order:

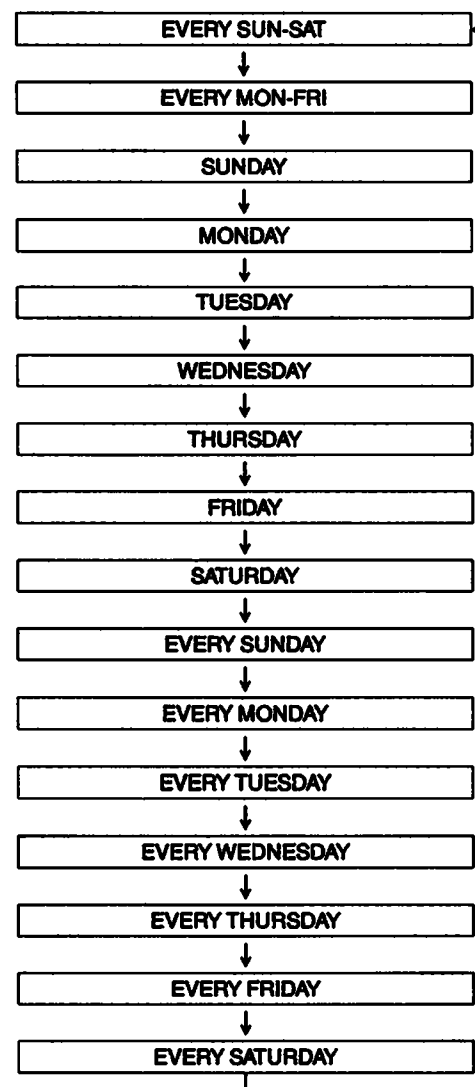

Press - for reverse direction.

If you want to set program 2 or 3, press RETURN and repeat steps 4 - 9.

Setting the Channel Block

CHANNEL BLOCK prevents a channel from appearing on the screen for preset hours. We suggest you to use this function to prevent children from watching undesirable programs.

Example: Set the CHANNEL BLOCK at 4:00 PM (for 1 hour), every Saturday, on channel 12.

Step 1 – 2: Same as in "Setting the ON/OFF Timer". (See page 54.)

3 Press + / – until ▷ points to "CHANNEL BLOCK", then RETURN.



RETURN



CHANNEL BLOCK

 : AM

 H

CH

Select the day.
Use [Δ ▽]&[RETURN]

Step 5* – 9: Same as in "Setting the ON/OFF Timer." (See page 54.)
* Step 4 is not necessary for the channel block operation.

CHANNEL BLOCK

EVERY SAT

4 : 00 PM



1 H

CH 12

CHANNEL BLOCK is
set. Thank you

Now CHANNEL BLOCK is set.

The picture of the selected channel will be blocked from viewing and the sound will be muted, at the preset time. A red "Blocked" indication will appear on the screen while the channel is blocked.

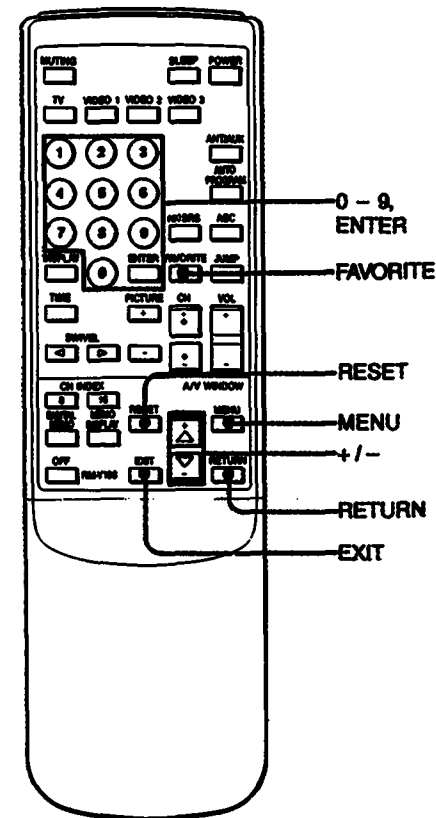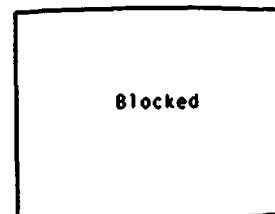

To restore the normal picture
Press EXIT.

To clear the setting
Display the "CHANNEL BLOCK" page and press RESET, then EXIT.


To reset the setting
Display the "CHANNEL BLOCK" page and repeat the steps from the beginning.

Setting Your Favorite Channels



To be continued ►

By setting your favorite channels (maximum 5 channels), you will be able to choose them quickly just by pressing the FAVORITE button. First, store your favorite channels.


Step 1 – 2: Same as in "Setting the ON/OFF Timer". (See page 54.)

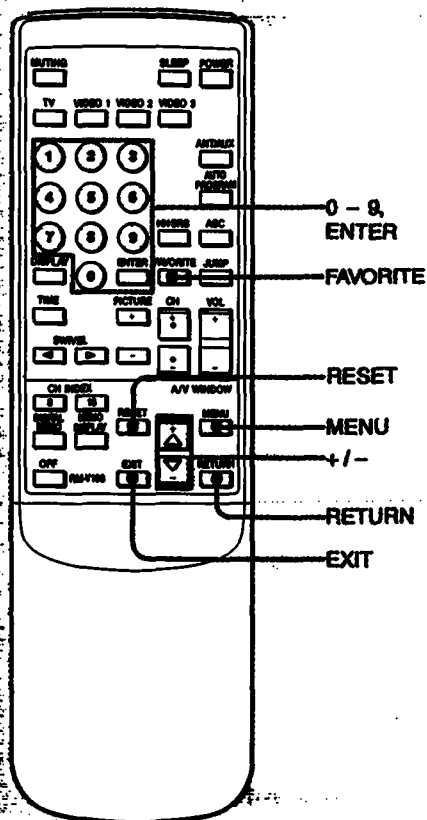



3 Press +/- until ► points to "FAVORITE CHANNEL".

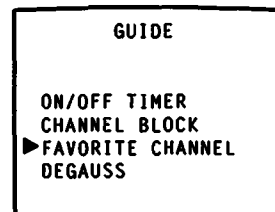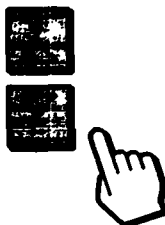


4 Press RETURN.

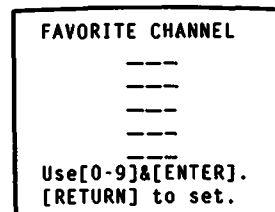


5 Press 0 – 9 to set the channel number you want.

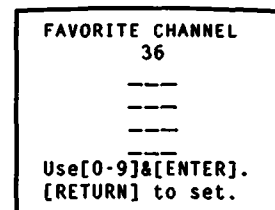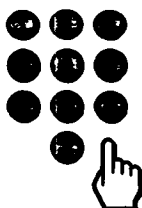

6 Press ENTER.

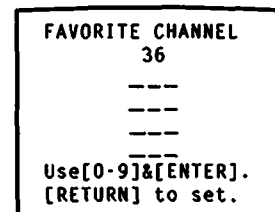

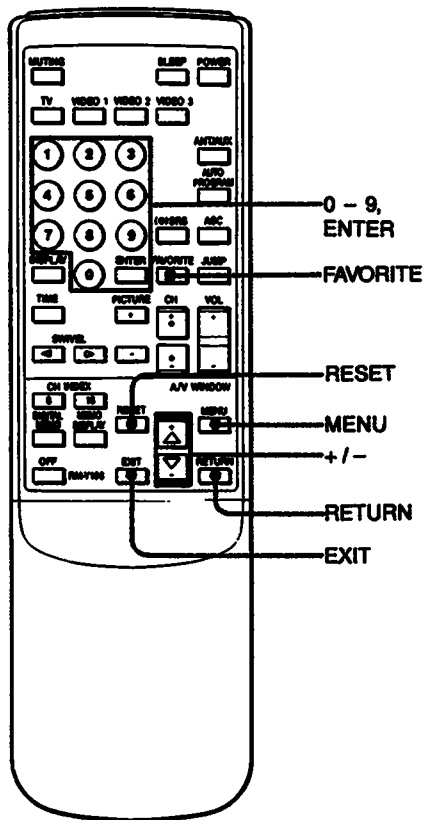

7 Repeat steps 5 and 6 for the rest of the channels.
If you do not want to store any more channels, you can go to step 8.

```
FAVORITE CHANNEL
  36
  --2
  --
  --
  --
  --
Use[0-9]&[ENTER].
[RETURN] to set.
```

8 Press RETURN.
Now the FAVORITE CHANNEL is set.



```
FAVORITE CHANNEL
  36
  2
  42
  55
  19
FAVORITE CH is
set. Thank you.
```

After setting your favorite channels

Each time you press FAVORITE, the channels will appear sequentially.




To restore the normal picture
Press EXIT.

To clear the setting
Display the "FAVORITE CHANNEL" page and press RESET, then EXIT.

To reset the setting
Display the "FAVORITE CHANNEL" page and repeat the steps from the beginning.

Using the Programmable Remote Commander *To be continued ▶*

You can operate other remote controlled video equipment using the supplied RM-Y106/Y107/Y108 Remote Commander. The supplied Remote Commander is programmed to operate Sony video equipment. In addition, you can reprogram this Remote Commander to operate non-Sony equipment.

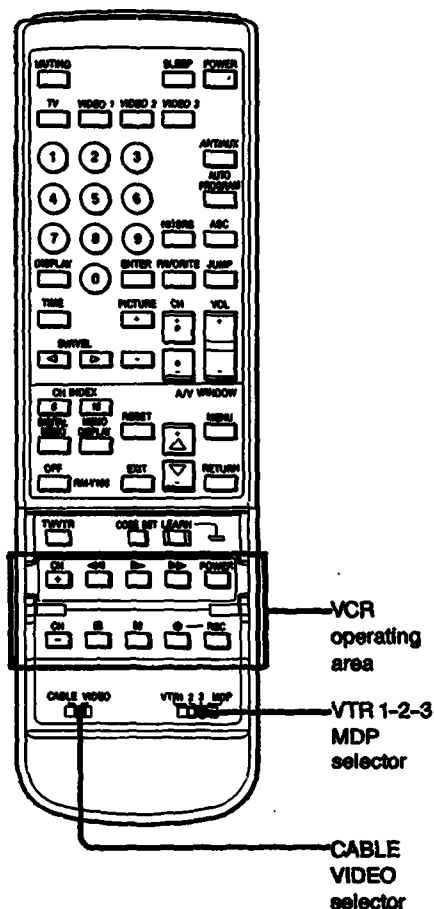


Operating Sony Video Equipment

With the supplied Remote Commander, you can operate Sony video cassette recorders (Beta, 8mm VHS) and video disc players (including multi disc player) without programming.

1 Set the CABLE/VIDEO selector to VIDEO.



 2 Set the VTR 1/2/3/MDP selector according to the video equipment you want to operate.



If you want to operate A:	then set to
Beta, ED Beta VCR	VTR 1
8mm VCR	VTR 2
VHS VCR	VTR 3
Video disc player	MDP

3 Use the buttons in the video operating area to operate the video equipment.

Operating a video cassette recorder

To record Press ●.
 To start playback Press ►.
 To stop Press ■.
 To advance the tape rapidly Press ►►.
 To rewind the tape Press ◄◄.
 To freeze a picture Press ||.

To resume normal playback, press again.

To view the picture at a fast speed to find a particular scene
 Keep pressing ►► or ◄◄ during playback.
 To resume normal playback, release the button.

If the equipment does not have a certain function, the corresponding button on this Remote Commander is not effective.

Operating a video disc player

To start playback Press ►.
 To stop Press ■.
 To freeze a picture Press ||.

To resume normal playback, press again.


This function is effective only for CAV (standard-play disc). With CLV (extended-play disc), the video disc player will go into the standby mode if || is pressed.

To view the picture at a fast speed to find a particular scene
 Keep pressing ►► or ◄◄ during playback.
 To resume normal playback, release the button.



Note
 After setting other manufacture's code
 You cannot operate Sony video equipment with the supplied Remote Commander without setting the Sony.

Using the Programmable Remote Commander

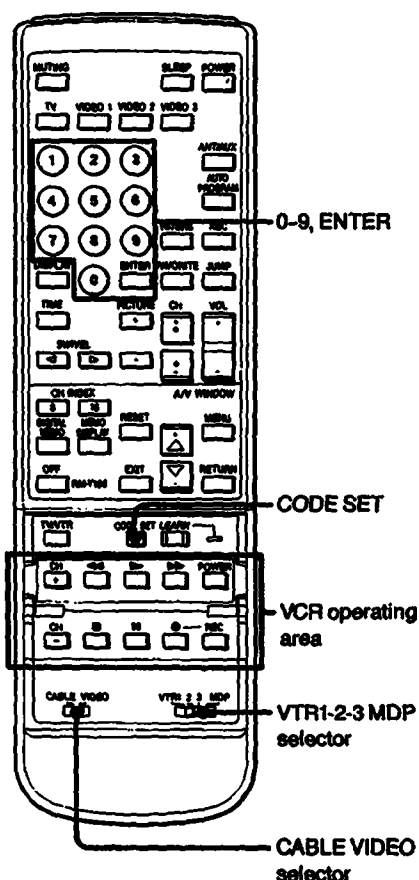

Operating Non-Sony or Sony Video Equipment (Pre-programmed Function)

The supplied Remote Commander has pre-programmed functions. Thus you can operate non-Sony video equipment with the supplied Remote Commander by setting the manufacturer's code.

 
Setting the manufacturer's code

- 1 Set the CABLE/VIDEO selector to VIDEO.




- 2 Set the VTR1/2/3/MDP selector to the position that you want to operate the equipment at.

By employing the VTR 1/2/3 settings, you can use your remote commander to operate up to 3 pieces of equipment. Note: If you also use Sony video equipment, set other maker's equipment to a position not being used for your Sony video equipment.



- 3 While pressing CODE SET, press manufacture's code numbers (See table).

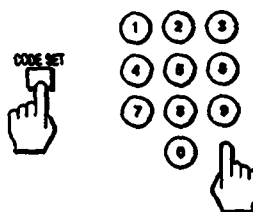

- 4 Press ENTER.



The LEARN indicator turns green and then goes off. (A long beep) Now you can operate the non-Sony video equipment with the supplied Remote Commander.

- 5 Use the video operating buttons to operate video equipment.



You may not be able to operate your non-Sony video equipment with the supplied Remote Commander. This is because your equipment may use a code that is not provided with this Remote Commander. In this case, please use the remote control unit provided with the non-Sony equipment.

Manufacturers and their code numbers (video cassette recorder)

Manufacturer	Code number
Sony	01, 02, 03
Canon	05
Emerson	22, 30, 33
Fisher	10, 11, 12, 15
Funai	29
General Electric	05, 08
Goldstar	25
Hitachi	07, 08
JVC	16
Magnavox	05, 06, 09
Mitsubishi	18, 19, 26, 27
Multitech	29
NEC	16, 23, 31
Panasonic	05, 06
Philco	05, 06
Philips	05, 06, 09
Quasar	05, 06
RCA	07, 08
Samsung	24, 32
Sanyo	11, 15
Scott	21
Sharp	13, 14
Shintom	34
Sylvania	05, 06, 09
Symphonic	29
Teknika	28, 29
Toshiba	20, 21
Tote vision	25
Zenith	17



On the code number

- If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.
- If you enter a new code number, the code number previously entered at that setting will be erased.

On Sony's code number

The number and operable equipment are as follows:

- 01: Beta
- 02: 8 mm
- 03: VHS
- 04: MDP



For your convenience

You can write the operable manufacturer and its code number in the supplied seal and stick it on the rear of the Remote Commander.

Manufacturers and their code numbers (video disc player)

Manufacturer	Code number
Sony	04
Kenwood	58
Magnavox	52
Marantz	54
Mitsubishi	51
Panasonic	55
Philips	52
Pioneer	51
RCA	51
Sanyo	57
Sharp	56
Yamaha	53

Using the Programmable Remote Commander

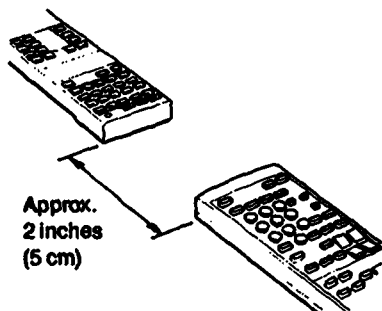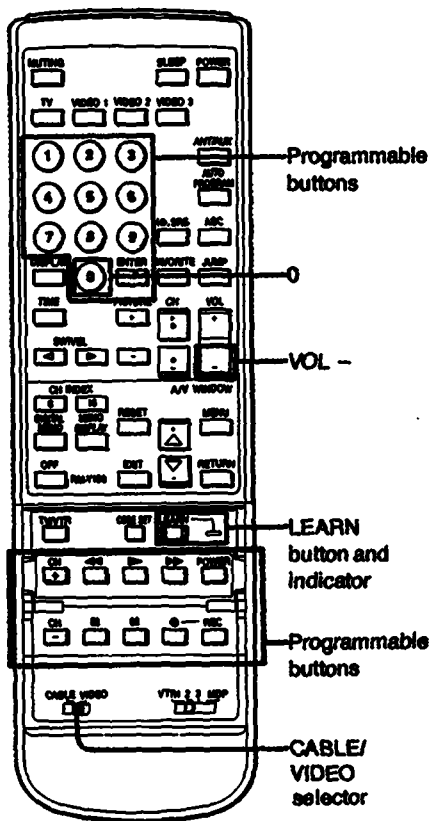

Note
For accurate learning
Do not move the remote commanders during the learning process.

Operating non-Sony or Sony Audio and Video Equipment (Learning Function)


With this feature, you can "teach" any of the programmable buttons to operate one function each of another remote commander. Use the Learning function to program the supplied remote commander to operate non-Sony and Sony audio equipment, your remote controlled cable decoder box, and video equipment of manufacturers not listed in the chart on p. 61.

- 1 Set the CABLE/VIDEO selector to CABLE.



- 2 Face this Remote Commander with the other remote commander head to head, approximately 2 inches (5 cm) apart.

- 3 Press LEARN.
The LEARN indicator lights up in green.

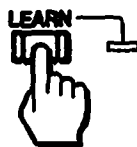

- 4 Momentarily press the button of this Remote Commander on which a function is to be memorized.

The LEARN indicator lights up in red. (A short beep).
Now it's ready for learning.

The Remote Commander beeps repeatedly if there is inappropriate operation. Try again from this step.

- 5 Keep pressing the function button of the other remote commander until the LEARN indicator turns to green again. (A long beep)
If this does not happen, the learning process has not been completed. Repeat steps 4 and 5.

- 6 To program other buttons, repeat steps 4 - 5.

- 7 Press LEARN.
The LEARN indicator lights up in red, then goes off.
Now the setting is complete.

Clearing memorized functions


- 1 Set the CABLE/VIDEO selector to CABLE.



- 2 Press LEARN.
The LEARN indicator lights up in green.



- 3 Press VOLUME -.
Keep pressing the VOLUME - button and "0" at once until 6 short beeps are heard.

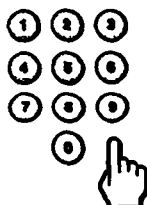

- 4 Press LEARN.
Now all the memorized functions are cleared.



On learning Function

- When you clear the memorized functions, the buttons retain their factory set memory.
- Be sure to confirm that the functions have been memorized as a few commanders of other manufacturers are not compatible with this Remote Commander.
- Do not use the learning function for other than video and audio equipment.
- When operating equipment with learned functions, the selectors should be set to the same position as they were when the functions were memorized.
- When a new function is assigned to a button, the previous function is cleared automatically.
- When the memories are full, the LEARN indicator lights steadily if you try to memorize a new function.
In such a case, set the USE/LEARN selector to USE to turn the indicator off, then clear the unnecessary functions.

Caution



When replacing the batteries, do it within approximately 30 minutes. Otherwise, the memorized functions may be erased.

The learning function will not work in the following cases:

Problems:	Solutions:
There is a fluorescent lamp or equipment which emits infrared energy.	Move the remote commanders away from such infrared sources.
The batteries are exhausted.	Replace all the batteries with new ones.
There is an obstacle between the Remote Commanders, or the Remote Commanders are not positioned head to head and exactly aligned.	Position the Remote Commanders properly.

If You Have any Trouble

You can eliminate disturbances in picture and sound by checking the symptoms and following the suggestions listed below.

Problem	Check and Adjust
Poor or no picture (Screen not lit), good sound	<ul style="list-style-type: none">• Adjust PICTURE.• Adjust BRIGHT.• Check antenna/cable connections.
Good picture, no sound	<ul style="list-style-type: none">• Press VOLUME + on the TV or VOL + on the Remote Commander.• Press MUTING on the Remote Commander.• Check that the MTS button is set correctly.• Check that the TV/VIDEO or input select button is set correctly.• Set the SPEAKER SW (switch) to ON.
No picture (screen not lit), no sound	<ul style="list-style-type: none">• Is POWER switched on?• Plug the unit into a wall outlet.• Check that the TV/VIDEO or input select button is set correctly.
No color	<ul style="list-style-type: none">• Is it a color program?• Adjust COLOR.
Snow and noise only	<ul style="list-style-type: none">• Is it an active or the correct channel?• Check the CABLE setting.• Check the ANT/AUX button setting.• Check antenna/cable connections.
Learning function on the commander does not work.	<ul style="list-style-type: none">• Check the USE/LEARN selector setting.• Check that the Remote Commanders are positioned properly.• Check to see if the batteries are exhausted.• If there is a fluorescent lamp near by, move the Remote Commanders away from it.
Dotted lines or stripes	<p>This is often caused by local interference. (e.g. cars, neon signs, hairdryers, etc.) Adjust the antenna for minimum interference.</p>
Double images or ghosts	<p>Reflections from nearby mountains or buildings often cause this problem. A highly directional outdoor antenna or a CATV cable may improve the picture.</p> <p>Try another channel. It could be station trouble.</p> <p>If the problem persists, contact your nearest service facility.</p>

Specifications

To be continued ►

Television system American TV standards

Channel coverage VHF: 2 – 13
UHF: 14 – 69
Cable TV: 1 – 125

Picture tube Microblack Trinitron tube
27-inch picture measured diagonally
28-inch picture tube measured diagonally
(KV-27XBR51/27XBR55)
29-inch picture measured diagonally
31-inch picture tube measured diagonally
(KV-29XBR85)
32-inch picture measured diagonally
34-inch picture tube measured diagonally
(KV-32XBR51/32XBR55/32XBR75)

Antenna 75-ohm external antenna terminal for VHF/UHF

Input VIDEO 1, 2 and 3 IN
S VIDEO IN (4-pin mini DIN)
Y: 1 Vp-p, 75 ohms
unbalanced, sync negative
C: 0.286 Vp-p (Burst signal)
75-ohms
Video (phono jacks): 1 Vp-p,
75-ohms unbalanced, sync negative
Audio (phono jacks): 500 mVrms
(100% modulation)
Impedance: 47 kilohms

Output MONITOR OUTPUT
S VIDEO OUTPUT (4-pin mini DIN)
Y: 1 Vp-p, 75-ohms
unbalanced, sync negative
C: 0.286 Vp-p (Burst signal)
75-ohms
Video (phono jacks): 1 Vp-p,
75-ohms unbalanced, sync negative
Audio (phono jacks): 500 mVrms
(100% modulation)
Impedance: 10 kilohms
AUDIO OUTPUT (VARIABLE) (phono jacks)
More than 408 mVrms at the maximum volume setting (variable)
Impedance: 5 kilohms

Speaker output (KV-27XBR51/32XBR51/27XBR55/32XBR55)
Main speakers
5W × 2: 8-ohm minimum
Super woofer
20W: 8-ohm minimum

Power requirements 120V AC, 60Hz

Power consumption

Model	KV-27XBR51 KV-27XBR55	KV-29XBR85	KV-32XBR51 KV-32XBR55 KV-32XBR75
Max.	225W	286W	240W
Standby	1.5W	2W	1.5W

Dimensions (w/h/d) (KV-27XBR51/27XBR55)
Approx. 661 × 563.5 × 547.5 mm
(26 $\frac{1}{8}$ × 22 $\frac{1}{4}$ × 21 $\frac{5}{8}$ inches)
(KV-32XBR51/32XBR55)
Approx. 781 × 675 × 604.5 mm
(30 $\frac{3}{4}$ × 26 $\frac{5}{8}$ × 23 $\frac{7}{8}$ inches)
(KV-32XBR75)
Approx. 922 × 1101 × 665.7 mm
(36 $\frac{3}{8}$ × 43 $\frac{3}{8}$ × 26 $\frac{1}{4}$ inches)
(KV-29XBR85)
Approx. 789 × 1132.5 × 736 mm
(30 $\frac{3}{8}$ × 44 $\frac{1}{2}$ × 29 inches)

Weight (KV-27XBR51)
Approx. 48.5kg (106lb 15oz)
(KV-32XBR51)
Approx. 78.3kg (172lb 10oz)
(KV-27XBR55)
Approx. 49.4kg (108lb 15oz)
(KV-32XBR55)
Approx. 79.2kg (174lb 10oz)
(KV-32XBR75)
Approx. 137.5kg (303lb 3oz)
(KV-29XBR85)
Approx. 112.8kg (248lb 11 oz)

Specifications

Accessories supplied

YES: supplied NO: not supplied

Model	KV-27/32XBR51	KV-27/32XBR55
Programmable Commander	RM-Y106	RM-Y107
	with 2 size AA (R6) Eveready batteries (1)	
Mini Commander	YES	YES
Speakers and speaker cords	Main speakers (2) Super woofer (1) Speaker cords (2) and screws (4) for main speakers	Main speakers (2) Super woofer (1) Speaker cords (2) and screws (4) for main speakers

Model	KV-32XBR75	KV-29XBR85
Programmable Commander	RM-Y107	RM-Y108
	with 2 size AA (R6) Eveready batteries (1)	
Mini Commander	NO	NO
Speakers and speaker cords	NO	NO

Optional accessories

U/V mixer EAC-66
Connecting cable
VMC-810/820S
YC-15V/30V

Design and specifications are subject to change without notice.

Maintenance

Before the cleaning, turn off the TV.

1. Clean the cabinet and the front glass with a soft cloth slightly moistened with mild detergent solution.
2. Wipe them with a dry soft cloth.

Caution

Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene.

For KV-29XBR85


You can take out the front glass to clean the TV screen.

Move the clasps to inside.

Push the tabs towards the center with your thumbs.

Caution

Be careful when you take the glass out that it does not fall down.

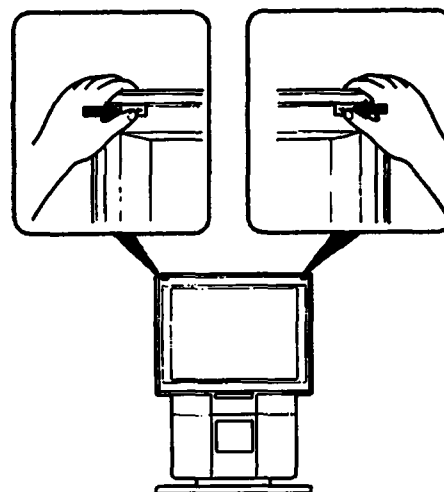

Glossary

ASC (Active Signal Correction)

Adjusts sharpness, brightness, color and picture settings.

Notch

Adjusts dots or stripes which appear while you are watching a picture from a computer or a video source. (Normally, set to NOTCH OFF.)

Picture-in-picture

Displays two or more programs at the same time.

(●) Sound Retrieval System (SRS)

Reproduces the ambience and dynamics of the original live performance so that you can enjoy the sound as if you were at a concert hall or a recording studio. SRS enables you to enjoy the optimum sound from anywhere in the room.

The (●) Sound Retrieval System is manufactured by Sony Corporation under license from the Hughes Aircraft Company, a subsidiary of GM Hughes Electronics. It is covered by U.S. Patent No. 4, 748, 669. Other U.S. and foreign patents pending.

(●) Sound Retrieval System and SRS® are trademarks of the Hughes Aircraft Company, a subsidiary of GM Hughes Electronics.

Super woofer

Amplifies the bass sound and you can enjoy wonderful sound.

S video input/output

Video input and output signals can be separated into Y (luminance, or brightness) and C (chroma, or color) signals. Usually, these two signals are combined in a VCR and sent as one signal to a TV. Separation of the Y and C signals prevents them from interfering with one another, thereby improving picture (especially in color) quality. This TV is equipped with an S video input jack through which these separated signals can be input directly.


Trinitone

Produces pictures with "warmness (reddish)" or "coolness (bluish)."

You can adjust the color temperature of the picture to your preference with this Trinitone feature.

Index

A adjustment -audio (bass, treble) 32 -picture (bright, color, hue, sharp) 28 ANT/AUX button 20 ASC (active signal correction) 26 ASC button 26 AUDIO OUT (VARIABLE) jacks 19 AUTO PROGRAM button 20 AUX (auxiliary) terminal 17 AV WINDOW buttons 28, 45	M Mini Remote (only for KV-27XBR51/32XBR51/ 27XBR55/32XBR55) 10 MONITOR OUT jacks 17 MTS (Multichannel TV Sound program) 34 MUTING button 26
B buttons -for picture-in-picture 36 -used for video equipment 59	N Notch 30 NR (noise reduction) 30
C cable TV channel chart 22 CABLE/VIDEO selector 59 CH + / - buttons 25 channel -adding 24 -erasing 23 -presetting 20 CHANNEL buttons 25 CODE SET button 60 connecting -an audio system 19 -antenna cable 15 -the speaker 12	P PICTURE button 47 picture mode 30 picture-in-picture 37 PIP 37 POWER button 25 Programmable Remote Commander 59
D degauss 35 DISPLAY buttons 27	R rear panel 8
E EXTERNAL SPEAKER terminals (only for KV-27XBR51/32XBR51/27XBR55/32XBR55) 12	S S video input/output 17 SLEEP button 27 SLEEP indicator (only for KV-32XBR75) 27 speaker balance 32 SPEAKER OUT terminals (for main speaker) (only for KV-27XBR51/32XBR51/ 27XBR55/32XBR55) 8 SPEAKER SW (switch) 19 SRS (sound retrieval system) 26 STEREO indicator 26 Super woofer 13 SUPER WOOFER jack (only for KV-27XBR51/32XBR51/ 27XBR55/32XBR55) 8 swivel (only for KV-29XBR85) 35
F front panel 7	T TIME button 47 timer 54 TIMER indicator 47 TO CONVERTER terminal 16 Trinitone 30 TV/VIDEO button 18 TV/VTR button 18
J JUMP button 27	V VCR 17, 59 VHF/UHF antenna terminal 17 VIDEO 1, 2, 3 IN jacks 18 VOLUME buttons 25 VTR 1/2/3MDP selector 59
L LEARN button 62 LEARN indicator 62	

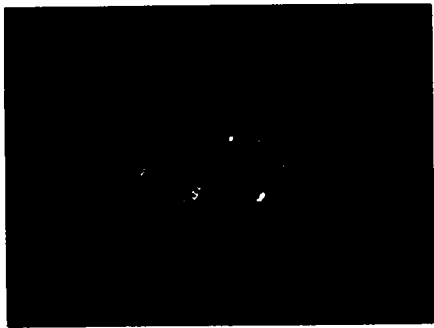

Trinitron® Color TV

KV-27XBR51

KV-32XBR51

KV-27XBR55

KV-32XBR55

KV-32XBR75

KV-29XBR85